

DeltaSol® BX L

from version 1.10

RESOL®

Manual for the
specialized craftsman

Installation
Operation
Functions and options
Troubleshooting



The Internet portal for easy and secure access
to your system data – www.vbus.net



11210575

Thank you for buying this RESOL product.
Please read this manual carefully to get the best performance from this unit.
Please keep this manual carefully.

en-US/CA

Manual

www.resol.com

Safety advice

Please pay attention to the following safety advice in order to avoid danger and damage to people and property.

Instructions

Attention must be paid to the valid local standards, regulations and directives!

Information about the product

Proper usage

The solar controller is designed for electronically controlling standard solar thermal systems and heating systems in compliance with the technical data specified in this manual.

Improper use excludes all liability claims.

CE-Declaration of conformity

The product complies with the relevant directives and is therefore labelled with the CE mark. The Declaration of Conformity is available upon request, please contact RESOL.



Note:

Strong electromagnetic fields can impair the function of the controller.

- Make sure the controller as well as the system are not exposed to strong electromagnetic fields.

Target group

These instructions are exclusively addressed to authorized skilled personnel.

Only qualified electricians should carry out electrical works.

Initial installation must be effected by the system owner or qualified personnel named by the system owner.

Description of symbols

WARNING! Warnings are indicated with a warning triangle!



→ **They contain information on how to avoid the danger described.**

Signal words describe the danger that may occur, when it is not avoided.

- **WARNING** means that injury, possibly life-threatening injury, can occur.
- **ATTENTION** means that damage to the appliance can occur.



Note:

Notes are indicated with an information symbol.

- Arrows indicate instruction steps that should be carried out.

Disposal

- Dispose of the packaging in an environmentally sound manner.
- Dispose of old appliances in an environmentally sound manner. Upon request we will take back your old appliances bought from us and guarantee an environmentally sound disposal of the devices.

Subject to technical change. Errors excepted.

DeltaSol® BX L solar controller

The system controller *DeltaSol*® BX L has been especially developed as an economical solution for multi-tank solar thermal systems. It features pre-programmed system layouts for a range of 2- and 3-tank systems and special functions such as an extended priority and loading logic. Of course, the *DeltaSol*® BX L is also


equipped with a thermal disinfection function, tube collector-, thermostat-, heat dissipation function and many more. With the integrated SD card slot, system data can easily be logged and transferred to a computer.

Contents

| | | | |
|--|-----------|---|-----------|
| 1 Overview | 4 | 4 Status menu | 39 |
| 2 Installation | 5 | 5 Initial commissioning | 40 |
| 2.1 Mounting | 5 | 6 Functions and options | 42 |
| 2.2 Electrical connection | 5 | 6.1 Status level | 42 |
| 2.3 Data communication / Bus | 6 | 6.2 Adjustment channels | 45 |
| 2.4 SD memory card slot | 6 | 6.3 Overview of options and their parameters | 69 |
| 2.5 Overview of basic system layouts | 7 | 7 User code and short menu - Adjustment values | 71 |
| 2.6 Systems | 8 | 8 Messages | 71 |
| 3 Operation and function | 36 | 9 Troubleshooting | 72 |
| 3.1 Buttons | 36 | 10 Accessories | 75 |
| 3.2 Selecting menu points and adjusting values | 36 | 10.1 Sensors and measuring instruments | 75 |
| 3.3 Menu structure | 36 | 10.2 Interface adapters | 75 |
| 3.4 Shortcut | 37 | 10.3 Visualization modules | 76 |
| 3.5 Indications and system monitoring display | 37 | 11 Index | 77 |
| 3.6 Further indications | 39 | | |

1 Overview

- 4 relay outputs, 5 Pt1000 temperature sensor inputs
- 2 PWM outputs for speed control of high-efficiency pumps
- 9 basic systems to choose from
- Unit °F and °C selectable

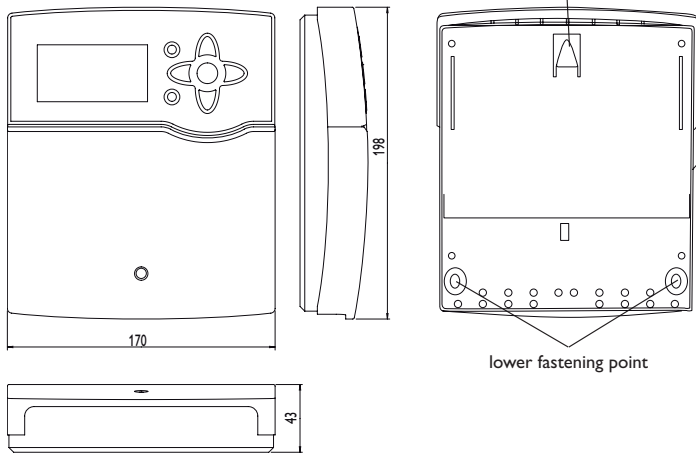

Technical data

Inputs: 5 Pt1000 temperature sensors, 1 V40 impulse input

Outputs: 3 semiconductor relays, 1 electromechanical relay and 2 PWM outputs

PWM frequency: 512 Hz

PWM voltage: 10.8 V

Switching capacity:

1 (1) A 240 V~ (semiconductor relay)

4 (1) A 240 V~ (electromechanical relay)

Total switching capacity: 4 A 240 V~

Power supply: 100–240 V~ (50–60 Hz)

Supply connection: type Y attachment

Standby: 0.58 W

Temperature controls class: I

Energy efficiency contribution: 1%

Mode of operation: type 1.B.C.Y action

Rated impulse voltage: 2.5 kV

Data interface: RESOL VBus®, SD card slot

VBus® current supply: 35 mA

Functions: ΔT control, pump speed control, energy metering, operating hours counter for the solar pump, evacuated tube collector function, thermostat function, tank loading in layers, priority logic, heat dissipation function, thermal disinfection function, function control

Housing: plastic, PC-ABS and PMMA

Mounting: wall mounting, mounting into patch panels is possible

Indication/Display: System-Monitoring-Display for system visualization, 16-segment display, 7-segment display, 9 symbols, operating control LED (directional pad) and background illumination

Operation: 7 push buttons at the front

Ingress protection: IP 20/EN 60529

Protection class: I

Ambient temperature: 0... 40 °C [32 ... 104 °F]

Pollution degree: 2

Dimensions: 198 x 170 x 43 mm [8.03" x 6.69" x 1.85"]

2 Installation

2.1 Mounting

WARNING! Electric shock!



Upon opening the housing, live parts are exposed!
→ **Always disconnect the device from power supply before opening the housing!**



Note:

Strong electromagnetic fields can impair the function of the controller.
→ Make sure the controller as well as the system are not exposed to strong electromagnetic fields.


The unit must only be located in dry interior rooms.

The controller must additionally be supplied from a double pole switch with contact gap of at least 3 mm [0.12"].

Please pay attention to separate routing of sensor cables and mains cables.

In order to mount the device to the wall, carry out the following steps:

- Unscrew the crosshead screw from the cover and remove it along with the cover from the housing.
- Mark the upper fastening point on the wall. Drill and fasten the enclosed wall plug and screw leaving the head protruding.
- Hang the housing from the upper fastening point and mark the lower fastening points (centers 150 mm [5.9"]).
- Insert lower wall plugs.
- Fasten the housing to the wall with the lower fastening screw and tighten.
- Carry out the electrical wiring in accordance with the terminal allocation (see chap. 2.2).
- Put the cover on the housing.
- Attach with the fastening screw.

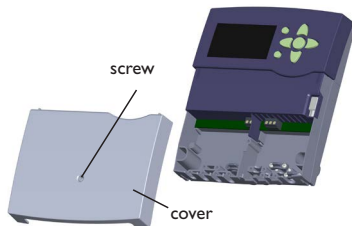

2.2 Electrical connection

WARNING! Electric shock!



Upon opening the housing, live parts are exposed!
→ **Always disconnect the device from power supply before opening the housing!**

ATTENTION! ESD damage!



Electrostatic discharge can lead to damage to electronic components!
→ **Take care to discharge properly before touching the inside of the device! To do so, touch a grounded surface such as a radiator or tap!**



Note:

Connecting the device to the power supply must always be the last step of the installation!



Note:

The pump speed must be set to 100% when auxiliary relays or valves are connected.

The controller is supplied with power via a power supply cable. The power supply of the device must be 100–240 V~ (50–60 Hz).

The controller is equipped with 4 relays in total to which loads such as pumps, valves, etc. can be connected:

- Relays 1 ... 3 are semiconductor relays, designed for pump speed control.
 - Conductor R1 ... R3
 - Neutral conductor N
 - Protective conductor ⊕
- Relay 4 is an electromechanical relay
 - Conductor R4
 - Neutral conductor N
 - Protective conductor ⊕


Depending on the product version, power supply cables and sensor cables are already connected to the device. If that is not the case, please proceed as follows:

Connect the **temperature sensors** (S1 to S5) to the corresponding terminals with either polarity:

- S1 = Sensor 1 (collector sensor)
- S2 = Sensor 2 (tank sensor base)
- S3 = Sensor 3 (e. g. tank sensor top)
- S4 = Sensor 4 (e. g. tank sensor tank 2)
- S5 = Sensor 5 (e. g. sensor collector 2)

A **V40** flowmeter can be connected to the terminals V40 and GND (either polarity).

The terminals marked PWM are control outputs for high-efficiency pumps (PWMA is allocated to R1, PWMB is allocated to R2).

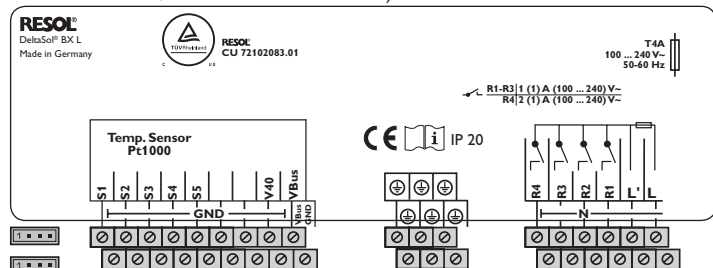

The **mains connection** is at the terminals:

Neutral conductor N

Conductor L

Conductor L' (L' is not connected with the mains cable. L' is a fused contact permanently carrying voltage.)

Protective conductor (⊖)



Note:

The connection depends on the system layout selected (see page 7).



Note:

For more details about the commissioning procedure see page 40.

2.3 Data communication/Bus

The controller is equipped with a **RESOL VBus®** for data transfer and energy supply to external modules. The connection is to be carried out at the terminals marked **VBus** (either polarity).

One or more **RESOL VBus®** modules can be connected via this data bus, such as:

- RESOL GA3 Large Display module/SD3 Smart Display
- RESOL AM1 Alarm Module
- RESOL DL2 Datalogger
- RESOL DL3 Datalogger

Furthermore, the controller can be connected to a PC or integrated into a network via the **RESOL VBus®/USB** or **VBus®/LAN** interface adapter (not included). Different solutions for visualization and remote parameterization are available on the RESOL website www.resol.com.



Note:


More accessories on page 75.

2.4 SD memory card slot

The controller is equipped with an SD card slot.

With an SD card, the following functions can be carried out:


- Store measurement and balance values onto the SD card. After the transfer to a computer, the values can be opened and visualized, e. g. in a spreadsheet.

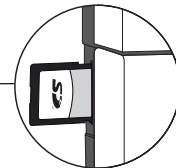


Note:

For more information about using an SD card, see page 67.


2.5 Overview of basic system layouts

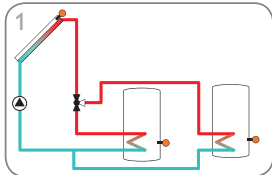


2-tank system with valve logic, 1 pump, 3 sensors and 3-port valve (page 8)

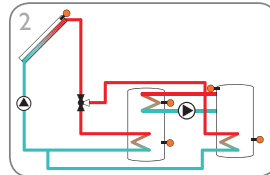


2-tank solar system with valve logic and heat exchange control (page 11)

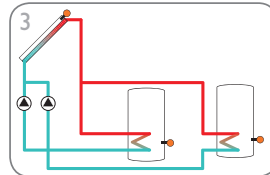


2-tank solar system with pump logic (page 14)

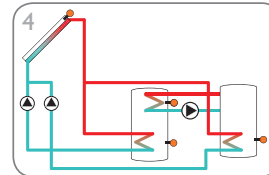


2-tank solar system with pump logic and heat exchange control (page 17)

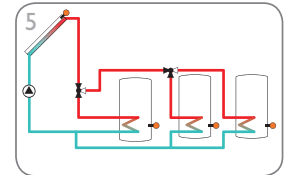


3-tank solar system with valve logic and heat exchange control (page 20)

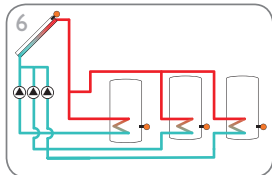


3-tank system with pump logic and heat exchange control (page 23)

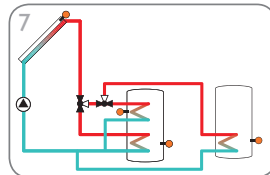

Solar system with tank loading in layers and 2 tanks (page 26)

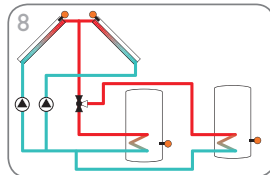

Solar system with east-/west collectors and 2 tanks (valve logic) (page 29)

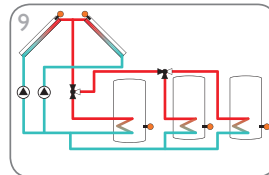


3-tank solar system with east-/west collectors (page 32)

2.6 Systems

System 1


2-tank system with valve logic, 1 pump, 3 sensors and 3-port valve

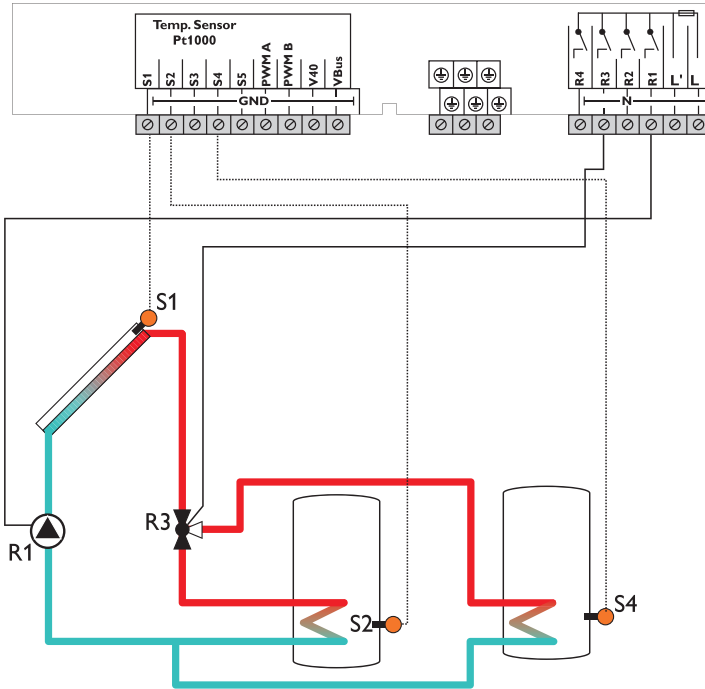

Note: 3-port valve normally open - tank 1 (S2)

| Sensors | | | Relay | | |
|---------|-----------------------|-------|-------|------------|---------|
| S1 | Temperature collector | 1/GND | R1 | Solar pump | R1/N/PE |
| S2 | Temperature tank base | 2/GND | R2 | Free | R2/N/PE |
| S3 | Free | 3/GND | R3 | Free | R3/N/PE |
| S4 | Free | 4/GND | R4 | Free | R4/R4 |
| S5 | Free | 5/GND | | | |

The controller calculates the temperature difference between collector sensor S1 and tank sensor S2. If the difference is larger than or identical to the adjusted switch-on temperature difference, the pump (R1) will be switched on and the tank will be loaded until the switch-off temperature difference or the maximum tank temperature is reached.



| Adjustment channels | | | | | | |
|---------------------|---------------|---------------|-------------------|-----------|--|------|
| Channel | Sub channel 1 | Sub channel 2 | Factory setting | Change to | Description | Page |
| ARR | | | 1 | | System | 45 |
| ROSA | | | 0000 | 5 | ROSA number | 66 |
| LOAD1 > | | | | | Loading 1 | |
| | DT1O | | 6.0 K [12.0 °Ra] | | Switch-on temperature difference 1 | 46 |
| | DT1F | | 4.0 K [8.0 °Ra] | | Switch-off temperature difference 1 | 46 |
| | DT1S | | 10.0 K [20.0 °Ra] | | Set temperature difference 1 | 46 |
| | RIS1 | | 2 K [4 °Ra] | | Rise 1 | 46 |
| | S1MAX | | 60 °C [140 °F] | | Tank maximum limitation 1 | 46 |
| | SMXS1 | | 2 | | Sensor tank max 1 | 46 |
| LOAD2 > | | | | | Loading 2 | |
| | DT2O | | 6.0 K [12.0 °Ra] | | Switch-on temperature difference 2 | 46 |
| | DT2F | | 4.0 K [8.0 °Ra] | | Switch-off temperature difference 2 | 46 |
| | DT2S | | 10.0 K [20.0 °Ra] | | Set temperature difference 2 | 46 |
| | RIS2 | | 2 K [4 °Ra] | | Rise 2 | 46 |
| | S2MAX | | 60 °C [140 °F] | | Tank maximum limitation 2 | 46 |
| | SMXS2 | | 4 | | Sensor tank max 2 | 46 |
| | LST2 | | ON | | Loading tank 2 | 47 |
| COL > | | | | | Collector | |
| | CEM | | 130 °C [270 °F] | | Collector emergency temperature | 48 |
| | OCCO* | | OFF | | Collector cooling option | 48 |
| | | CMAX | 110 °C [230 °F] | | Collector maximum temperature | 48 |
| | OCMN | | OFF | | Collector minimum limitation option | 49 |
| | | CMIN | 10.0 °C [50.0 °F] | | Minimum collector temperature | 49 |
| | OTCO | | OFF | | Evacuated tube collector function option | 49 |
| | | TCST | 07:00 | | Tube collector starting time | 49 |
| | | TCEN | 19:00 | | Tube collector ending time | 49 |
| | | TCRU | 30 s | | Tube collector runtime | 49 |
| | | TCIN | 30 min | | Tube collector standstill interval | 50 |
| | OCFR | | OFF | | Collector antifreeze option | 50 |
| | | CFR O | 4.0 °C [40.0 °F] | | Antifreeze temperature collector on | 50 |
| | | CFR F | 5.0 °C [42.0 °F] | | Antifreeze temperature collector off | 50 |
| | | FRPST | 1 | | Antifreeze tank selection | 51 |
| LLOGI > | | | | | Loading logic | |
| | LOGIC | | PRIO | | Priority logic | 51 |


Adjustment channels

| Channel | Sub channel 1 | Sub channel 2 | Factory setting | Change to | Description | Page |
|---------|---------------|---------------|-----------------|-----------|-----------------------------|------|
| | PRI01 | | 1 | | Priority logic tank 1 | 51 |
| | OSTS | | OFF | | Tank set option | 53 |
| | | TST1 | 45 °C [120 °F] | | Set tank temperature tank 1 | 53 |
| | | TST2 | 45 °C [120 °F] | | Set tank temperature tank 2 | 53 |
| | tLB | | 2 min | | Loading break time | 51 |
| | tRUN | | 15 min | | Circulation runtime | 51 |
| | PSPEE | | OFF | | Pause speed option | 54 |
| | PDELA | | OFF | | Pump delay option | 54 |
| COOL > | | | | | Cooling functions | |
| | OSYC* | | OFF | | System cooling | 55 |
| | OSTC | | OFF | | Tank cooling | 55 |
| | OHDP* | | OFF | | Heat dump | 56 |
| ODTFT > | | | | | ΔT function option | 58 |
| OTH > | | | | | Thermostat function option | 61 |
| PUMP > | | | | | Speed | |
| | PUMP1 | | PSOL | | Speed variant pump 1 | 47 |
| | PUMP2 | | PSOL | | Speed variant pump 2 | 47 |
| | PUMP3 | | OnOF | | Speed variant pump 3 | 47 |
| MAN > | | | | | Manual mode | |
| | MAN1 | | Auto | | Manual mode 1 | 61 |
| | MAN2 | | Auto | | Manual mode 2 | 61 |
| | MAN3 | | Auto | | Manual mode 3 | 61 |
| | MAN4 | | Auto | | Manual mode 4 | 61 |
| BLPR > | | | OFF | | Blocking protection | 61 |
| OTDIS > | | | OFF | | Thermal disinfection option | 62 |
| OPARR > | | | OFF | | Parallel relay option | 63 |
| OHQM > | | | OFF | | Energy metering option | 64 |
| DATE> | | | | | Enter date | 66 |
| LANG > | | | dE | | Language | 67 |
| UNIT > | | | °C | | Unit | 67 |
| OSDC > | | | | | SD card option | 67 |
| CODE | | | 0000 | | User code | 71 |
| RESET | | | OFF | | Factory setting | |

* are blocked against each other

System 2

2-tank solar system with valve logic and heat exchange control

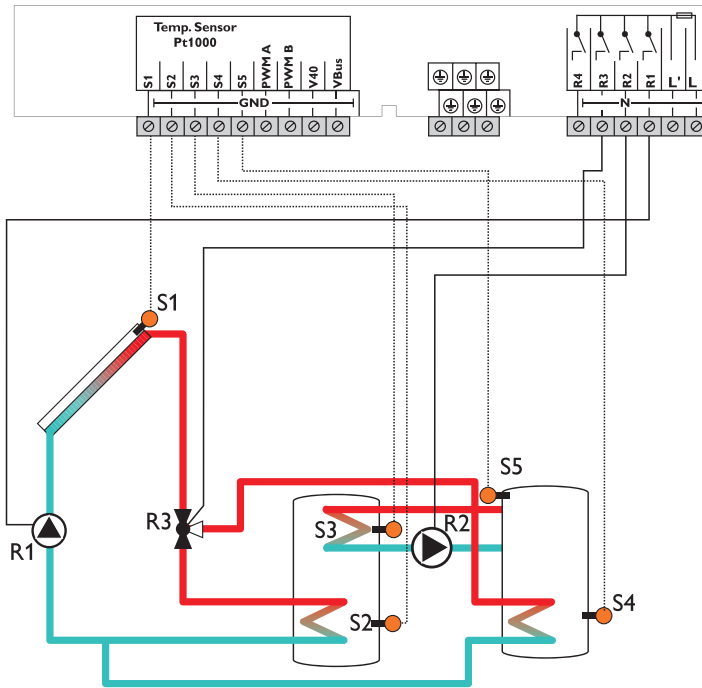


Note: 3-port valve normally open - tank 1 (S2)

| Sensor/terminal | Designation | Description |
|-----------------|-------------|-------------------------|
| S1 | TCOL | Temperature collector |
| S2 | TST1B | Temperature tank 1 base |
| S3 | TST1T | Temperature tank 1 top |
| S4 | TST2B | Temperature tank 2 base |
| S5 | TST2T | Temperature tank 2 top |
| V40 | | optional: flowmeter |

| Relay | Description |
|-------|--|
| R1 | Solar pump |
| R2 | Heat exchange pump |
| R3 | 3-port valve tank 1/2 |
| R4 | optional: Thermal disinfection Parallel relay Heat dump |

The controller compares the temperature at sensor S1 to the temperatures at sensors S2 and S4. If the measured temperature differences are higher than the adjusted switch-on temperature differences, the pump (R1) will be activated and the corresponding tank will be loaded up to the adjusted maximum temperature via the valve (R3). Tank 1 is loaded with priority. Heat exchange from tank 2 to tank 1 (R2) is possible with another temperature differential function (S3-heat sink/S5-heat source).

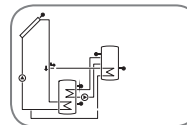

Adjustment channels


| Channel | Sub channel 1 | Sub channel 2 | Factory setting | Change to | Description | Page |
|---------|---------------|---------------|-------------------|-----------|--|------|
| ARR | | | 1 | 2 | System | 45 |
| ROSA | | | 0000 | 16 | ROSA number | 66 |
| LOAD1 > | | | | | Loading 1 | |
| | DT1O | | 6.0 K [12.0 °Ra] | | Switch-on temperature difference 1 | 46 |
| | DT1F | | 4.0 K [8.0 °Ra] | | Switch-off temperature difference 1 | 46 |
| | DT1S | | 10.0 K [20.0 °Ra] | | Set temperature difference 1 | 46 |
| | RIS1 | | 2 K [4 °Ra] | | Rise 1 | 46 |
| | S1MAX | | 60 °C [140 °F] | | Tank maximum limitation 1 | 46 |
| | SMXS1 | | 2 | | Sensor tank max 1 | 46 |
| LOAD2 > | | | | | Loading 2 | |
| | DT2O | | 6.0 K [12.0 °Ra] | | Switch-on temperature difference 2 | 46 |
| | DT2F | | 4.0 K [8.0 °Ra] | | Switch-off temperature difference 2 | 46 |
| | DT2S | | 10.0 K [20.0 °Ra] | | Set temperature difference 2 | 46 |
| | RIS2 | | 2 K [4 °Ra] | | Rise 2 | 46 |
| | S2MAX | | 60 °C [140 °F] | | Tank maximum limitation 2 | 46 |
| | SMXS2 | | 4 | | Sensor tank max 2 | 46 |
| | LST2 | | ON | | Loading tank 2 | 47 |
| COL > | | | | | Collector | |
| | CEM | | 130 °C [270 °F] | | Collector emergency temperature | 48 |
| | OCCO* | | OFF | | Collector cooling option | 48 |
| | | CMAX | 110 °C [230 °F] | | Collector maximum temperature | 48 |
| | OCMN | | OFF | | Collector minimum limitation option | 49 |
| | | CMIN | 10.0 °C [50.0 °F] | | Minimum collector temperature | 49 |
| | OTCO | | OFF | | Evacuated tube collector function option | 49 |
| | | TCST | 07:00 | | Tube collector starting time | 49 |
| | | TCEN | 19:00 | | Tube collector ending time | 49 |
| | | TCRU | 30 s | | Tube collector runtime | 49 |
| | | TCIN | 30 min | | Tube collector standstill interval | 50 |
| | OCFR | | OFF | | Collector antifreeze option | 50 |
| | | CFR O | 4.0 °C [40.0 °F] | | Antifreeze temperature collector on | 50 |
| | | CFR F | 5.0 °C [42.0 °F] | | Antifreeze temperature collector off | 50 |
| | | FRPST | 1 | | Antifreeze tank selection | 51 |
| LLOGI > | | | | | Loading logic | |
| | LOGIC | | PRIO | | Priority logic | 51 |
| | PRIO1 | | 1 | | Priority logic tank 1 | 51 |
| | OSTS | | OFF | | Tank set option | 53 |
| | | TST1 | 45 °C [120 °F] | | Set tank temperature tank 1 | 53 |
| | | TST2 | 45 °C [120 °F] | | Set tank temperature tank 2 | 53 |

| Adjustment channels | | | | | | |
|---------------------|---------------|---------------|--------------------|-----------|---|------|
| Channel | Sub channel 1 | Sub channel 2 | Factory setting | Change to | Description | Page |
| | tLB | | 2 min | | Loading break time | 51 |
| | tRUN | | 15 min | | Circulation runtime | 51 |
| | PSPEE | | OFF | | Pause speed option | 54 |
| | PDELA | | OFF | | Pump delay option | 54 |
| COOL > | | | | | Cooling functions | |
| | OSYC* | | OFF | | System cooling | 55 |
| | OSTC | | OFF | | Tank cooling | 55 |
| | OHDP* | | OFF | | Heat dump | 56 |
| DT4 > | | | | | Heat exchange | |
| | DT4O | | 6.0 K [12.0 °Ra] | | Switch-on difference | 56 |
| | DT4F | | 4.0 K [8.0 °Ra] | | Switch-off difference | 57 |
| | DT4S | | 10.0 K [20.0 °Ra] | | Set difference | 57 |
| | RIS4 | | 2 K [4 °Ra] | | Rise | 57 |
| | MAX4O | | 60 °C [140 °F] | | Switch-on temperature (maximum limitation) | 57 |
| | MAX4F | | 58.0 °C [135.0 °F] | | Switch-off temperature (maximum limitation) | 57 |
| | MIN4O | | 5.0 °C [42.0 °F] | | Switch-on temperature (minimum limitation) | 58 |
| | MIN4F | | 10.0 °C [50.0 °F] | | Switch-off temperature (minimum limitation) | 58 |
| OTH > | | | | | Thermostat function option | 61 |
| PUMP > | | | | | Speed | |
| | PUMP1 | | PSOL | | Speed variant pump 1 | 47 |
| | PUMP2 | | PSOL | | Speed variant pump 2 | 47 |
| | PUMP3 | | OnOF | | Speed variant pump 3 | 47 |
| MAN > | | | | | Manual mode | |
| | MAN1 | | Auto | | Manual mode 1 | 61 |
| | MAN2 | | Auto | | Manual mode 2 | 61 |
| | MAN3 | | Auto | | Manual mode 3 | 61 |
| | MAN4 | | Auto | | Manual mode 4 | 61 |
| BLPR > | | | OFF | | Blocking protection | 61 |
| OTDIS > | | | OFF | | Thermal disinfection option | 62 |
| OPARR > | | | OFF | | Parallel relay option | 63 |
| OHQM > | | | OFF | | Energy metering option | 64 |
| DATE> | | | | | Enter date | 66 |
| LANG > | | | dE | | Language | 67 |
| UNIT > | | | °C | | Unit | 67 |
| OSDC > | | | | | SD card option | 67 |
| CODE | | | 0000 | | User code | 71 |
| RESET | | | OFF | | Factory setting | |

* are blocked against each other

System 3


2-tank solar system with pump logic

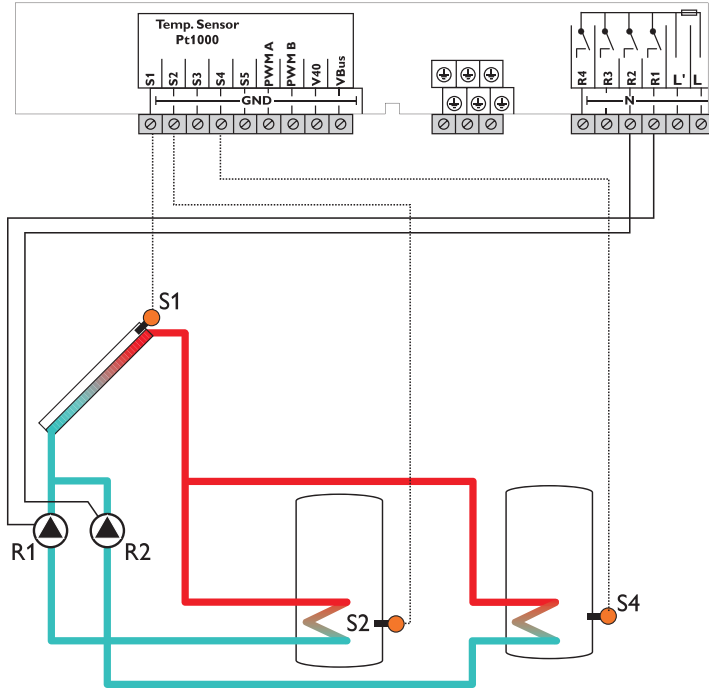

| Sensor/terminal | Designation | Description |
|-----------------|-------------|---|
| S1 | TCOL | Temperature collector |
| S2 | TST1B | Temperature tank 1 base |
| S3 | | Optional sensor for measurement purposes or options |
| S4 | TST2B | Temperature tank 2 base |
| S5 | | Optional sensor for measurement purposes or options |
| V40 | | |

| Relay | Description |
|-------|---|
| R1 | Solar pump tank 1 |
| R2 | Solar pump tank 2 |
| R3 | optional: |
| R4 | Thermal disinfection Parallel relay Heat dump |

The controller compares the temperature at sensor S1 to the temperatures at sensors S2 and S4. If the measured temperature differences are higher than the adjusted switch-on temperature differences, the pump (R1 and/or R2) will be activated and the corresponding tank will be loaded up to the adjusted maximum temperature at most.

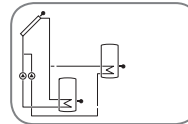

| Adjustment channels | | | | | | |
|---------------------|---------------|---------------|-------------------|-----------|--|------|
| Channel | Sub channel 1 | Sub channel 2 | Factory setting | Change to | Description | Page |
| ARR | | | 1 | 3 | System | 45 |
| ROSA | | | 0000 | 6 | ROSA number | 66 |
| LOAD1 > | | | | | Loading 1 | |
| | DT1O | | 6.0 K [12.0 °Ra] | | Switch-on temperature difference 1 | 46 |
| | DT1F | | 4.0 K [8.0 °Ra] | | Switch-off temperature difference 1 | 46 |
| | DT1S | | 10.0 K [20.0 °Ra] | | Set temperature difference 1 | 46 |
| | RIS1 | | 2 K [4 °Ra] | | Rise 1 | 46 |
| | S1MAX | | 60 °C [140 °F] | | Tank maximum limitation 1 | 46 |
| | SMXS1 | | 2 | | Sensor tank max 1 | 46 |
| LOAD2 > | | | | | Loading 2 | |
| | DT2O | | 6.0 K [12.0 °Ra] | | Switch-on temperature difference 2 | 46 |
| | DT2F | | 4.0 K [8.0 °Ra] | | Switch-off temperature difference 2 | 46 |
| | DT2S | | 10.0 K [20.0 °Ra] | | Set temperature difference 2 | 46 |
| | RIS2 | | 2 K [4 °Ra] | | Rise 2 | 46 |
| | S2MAX | | 60 °C [140 °F] | | Tank maximum limitation 2 | 46 |
| | SMXS2 | | 4 | | Sensor tank max 2 | 46 |
| | LST2 | | ON | | Loading tank 2 | 47 |
| COL > | | | | | Collector | |
| | CEM | | 130 °C [270 °F] | | Collector emergency temperature | 48 |
| | OCCO* | | OFF | | Collector cooling option | 48 |
| | | CMAX | 110 °C [230 °F] | | Collector maximum temperature | 48 |
| | OCMN | | OFF | | Collector minimum limitation option | 49 |
| | | CMIN | 10.0 °C [50.0 °F] | | Minimum collector temperature | 49 |
| | OTCO | | OFF | | Evacuated tube collector function option | 49 |
| | | TCST | 07:00 | | Tube collector starting time | 49 |
| | | TCEN | 19:00 | | Tube collector ending time | 49 |
| | | TCRU | 30 s | | Tube collector runtime | 49 |
| | | TCIN | 30 min | | Tube collector standstill interval | 50 |
| | OCFR | | OFF | | Collector antifreeze option | 50 |
| | | CFR O | 4.0 °C [40.0 °F] | | Antifreeze temperature collector on | 50 |
| | | CFR F | 5.0 °C [42.0 °F] | | Antifreeze temperature collector off | 50 |
| | | FRPST | 1 | | Antifreeze tank selection | 51 |
| LLOGI > | | | | | Loading logic | |
| | LOGIC | | PRIO | | Priority logic | 51 |
| | PRIO1 | | 1 | | Priority logic tank 1 | 51 |


Adjustment channels

| Channel | Sub channel 1 | Sub channel 2 | Factory setting | Change to | Description | Page |
|---------|---------------|---------------|-----------------|-----------|-----------------------------|------|
| | OSTS | | OFF | | Tank set option | 53 |
| | | TST1 | 45 °C [120 °F] | | Set tank temperature tank 1 | 53 |
| | | TST2 | 45 °C [120 °F] | | Set tank temperature tank 2 | 53 |
| | OSE | | OFF | | Spread function option | 53 |
| | | DTSE | 20 K [40 °Ra] | | Spread difference | 54 |
| | | SLSTR | 3 | | Tank spread function | 54 |
| | tLB | | 2 min | | Loading break time | 51 |
| | tRUN | | 15 min | | Circulation runtime | 51 |
| | PSPEE | | OFF | | Pause speed option | 54 |
| | PDELA | | OFF | | Pump delay option | 54 |
| COOL > | | | | | Cooling functions | |
| | OSYC* | | OFF | | System cooling | 55 |
| | OSTC | | OFF | | Tank cooling | 55 |
| | OHDP* | | OFF | | Heat dump | 56 |
| ODTFT > | | | | | ΔT function option | 58 |
| OTH > | | | | | Thermostat function option | 61 |
| PUMP > | | | | | Speed | |
| | PUMP1 | | PSOL | | Speed variant pump 1 | 47 |
| | PUMP2 | | PSOL | | Speed variant pump 2 | 47 |
| | PUMP3 | | OnOF | | Speed variant pump 3 | 47 |
| MAN > | | | | | Manual mode | |
| | MAN1 | | Auto | | Manual mode 1 | 61 |
| | MAN2 | | Auto | | Manual mode 2 | 61 |
| | MAN3 | | Auto | | Manual mode 3 | 61 |
| | MAN4 | | Auto | | Manual mode 4 | 61 |
| BLPR > | | | OFF | | Blocking protection | 61 |
| OTDIS > | | | OFF | | Thermal disinfection option | 62 |
| OPARR > | | | OFF | | Parallel relay option | 63 |
| OHQM > | | | OFF | | Energy metering option | 64 |
| DATE> | | | | | Enter date | 66 |
| LANG > | | | dE | | Language | 67 |
| UNIT > | | | °C | | Unit | 67 |
| OSDC > | | | | | SD card option | 67 |
| CODE | | | 0000 | | User code | 71 |
| RESET | | | OFF | | Factory setting | |

* are blocked against each other

System 4

2-tank solar system with pump logic and heat exchange control

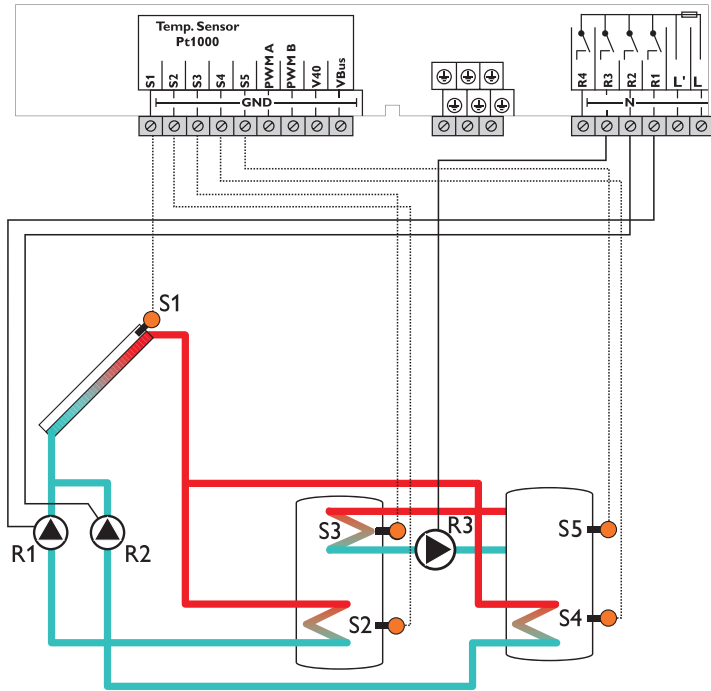


| Sensor/terminal | Designation | Description |
|-----------------|-------------|-------------------------|
| S1 | TCOL | Temperature collector |
| S2 | TST1B | Temperature tank 1 base |
| S3 | TST1T | Temperature tank 1 top |
| S4 | TST2B | Temperature tank 2 base |
| S5 | TST2T | Temperature tank 2 top |
| V40 | | optional: flowmeter |

| Relay | Description |
|-------|--|
| R1 | Solar pump tank 1 |
| R2 | Solar pump tank 2 |
| R3 | Heat exchange pump |
| R4 | optional: Thermal disinfection Parallel relay Heat dump |

The controller compares the temperature at sensor S1 to the temperatures at sensors S2 and S4. If the measured temperature differences are higher than the adjusted switch-on temperature differences, the pump (R1 and/or R2) will be activated and the corresponding tank will be loaded up to the adjusted maximum temperature. Tank 1 is loaded with priority.

Heat exchange from tank 2 to tank 1 (R3) is possible with another temperature differential function (S3 - heat sink / S5 - heat source).

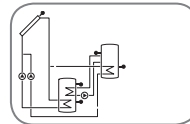

Adjustment channels



| Channel | Sub channel 1 | Sub channel 2 | Factory setting | Change to | Description | Page |
|---------|---------------|---------------|-------------------|-----------|--|------|
| ARR | | | 1 | 4 | System | 45 |
| ROSA | | | 0000 | 17 | ROSA number | 66 |
| LOAD1 > | | | | | Loading 1 | |
| | DT1O | | 6.0 K [12.0 °Ra] | | Switch-on temperature difference 1 | 46 |
| | DT1F | | 4.0 K [8.0 °Ra] | | Switch-off temperature difference 1 | 46 |
| | DT1S | | 10.0 K [20.0 °Ra] | | Set temperature difference 1 | 46 |
| | RIS1 | | 2 K [4 °Ra] | | Rise 1 | 46 |
| | S1MAX | | 60 °C [140 °F] | | Tank maximum limitation 1 | 46 |
| | SMXS1 | | 2 | | Sensor tank max 1 | 46 |
| LOAD2 > | | | | | Loading 2 | |
| | DT2O | | 6.0 K [12.0 °Ra] | | Switch-on temperature difference 2 | 46 |
| | DT2F | | 4.0 K [8.0 °Ra] | | Switch-off temperature difference 2 | 46 |
| | DT2S | | 10.0 K [20.0 °Ra] | | Set temperature difference 2 | 46 |
| | RIS2 | | 2 K [4 °Ra] | | Rise 2 | 46 |
| | S2MAX | | 60 °C [140 °F] | | Tank maximum limitation 2 | 46 |
| | SMXS2 | | 4 | | Sensor tank max 2 | 46 |
| | LST2 | | ON | | Loading tank 2 | 47 |
| COL > | | | | | Collector | |
| | CEM | | 130 °C [270 °F] | | Collector emergency temperature | 48 |
| | OCCO* | | OFF | | Collector cooling option | 48 |
| | | CMAX | 110 °C [230 °F] | | Collector maximum temperature | 48 |
| | OCMN | | OFF | | Collector minimum limitation option | 49 |
| | | CMIN | 10.0 °C [50.0 °F] | | Minimum collector temperature | 49 |
| | OTCO | | OFF | | Evacuated tube collector function option | 49 |
| | | TCST | 07:00 | | Tube collector starting time | 49 |
| | | TCEN | 19:00 | | Tube collector ending time | 49 |
| | | TCRU | 30 s | | Tube collector runtime | 49 |
| | | TCIN | 30 min | | Tube collector standstill interval | 50 |
| | OCFR | | OFF | | Collector antifreeze option | 50 |
| | | CFR O | 4.0 °C [40.0 °F] | | Antifreeze temperature collector on | 50 |
| | | CFR F | 5.0 °C [42.0 °F] | | Antifreeze temperature collector off | 50 |
| | | FRPST | 1 | | Antifreeze tank selection | 51 |
| LLOGI > | | | | | Loading logic | |
| | LOGIC | | PRIO | | Priority logic | 51 |
| | PRI01 | | 1 | | Priority logic tank 1 | 51 |
| | OSTS | | OFF | | Tank set option | 53 |
| | | TST1 | 45 °C [120 °F] | | Set tank temperature tank 1 | 53 |
| | | TST2 | 45 °C [120 °F] | | Set tank temperature tank 2 | 53 |
| | | OSE | OFF | | Spread function option | 53 |

| Adjustment channels | | | | | | |
|---------------------|---------------|---------------|--------------------|-----------|---|------|
| Channel | Sub channel 1 | Sub channel 2 | Factory setting | Change to | Description | Page |
| | | DTSE | 20 K [40 °Ra] | | Spread difference | 54 |
| | | SLSTR | 3 | | Spread function option | 54 |
| | tLB | | 2 min | | Loading break time | 51 |
| | tRUN | | 15 min | | Circulation runtime | 51 |
| | PSPEE | | OFF | | Pause speed option | 54 |
| COOL > | | | | | Cooling functions | |
| | OSYC* | | OFF | | System cooling | 55 |
| | OSTC | | OFF | | Tank cooling | 55 |
| | OHDP* | | OFF | | Heat dump | 56 |
| DT4 > | | | | | Heat exchange | |
| | DT4O | | 6.0 K [12.0 °Ra] | | Switch-on difference | 56 |
| | DT4F | | 4.0 K [8.0 °Ra] | | Switch-off difference | 57 |
| | DT4S | | 10.0 K [20.0 °Ra] | | Set difference | 57 |
| | RIS4 | | 2 K [4 °Ra] | | Rise | 57 |
| | MAX4O | | 60 °C [140 °F] | | Switch-on temperature (maximum limitation) | 57 |
| | MAX4F | | 58.0 °C [135.0 °F] | | Switch-off temperature (maximum limitation) | 57 |
| | MIN4O | | 5.0 °C [42.0 °F] | | Switch-on temperature (minimum limitation) | 58 |
| | MIN4F | | 10.0 °C [50.0 °F] | | Switch-off temperature (minimum limitation) | 58 |
| OTH | | | | | Thermostat function option | 61 |
| PUMP > | | | | | Speed | |
| | PUMP1 | | PSOL | | Speed variant pump 1 | 47 |
| | PUMP2 | | PSOL | | Speed variant pump 2 | 47 |
| | PUMP3 | | OnOF | | Speed variant pump 3 | 47 |
| MAN > | | | | | Manual mode | |
| | MAN1 | | Auto | | Manual mode 1 | 61 |
| | MAN2 | | Auto | | Manual mode 2 | 61 |
| | MAN3 | | Auto | | Manual mode 3 | 61 |
| | MAN4 | | Auto | | Manual mode 4 | 61 |
| BLPR > | | | OFF | | Blocking protection | 61 |
| OTDIS > | | | OFF | | Thermal disinfection option | 62 |
| OPARR > | | | OFF | | Parallel relay option | 63 |
| OHQM > | | | OFF | | Energy metering option | 64 |
| DATE> | | | | | Enter date | 66 |
| LANG > | | | dE | | Language | 67 |
| UNIT > | | | °C | | Unit | 67 |
| OSDC > | | | | | SD card option | 67 |
| CODE | | | 0000 | | User code | 71 |
| RESET | | | OFF | | Factory setting | |

* are blocked against each other


System 5

3-tank solar system with valve logic and priority logic

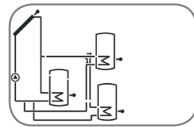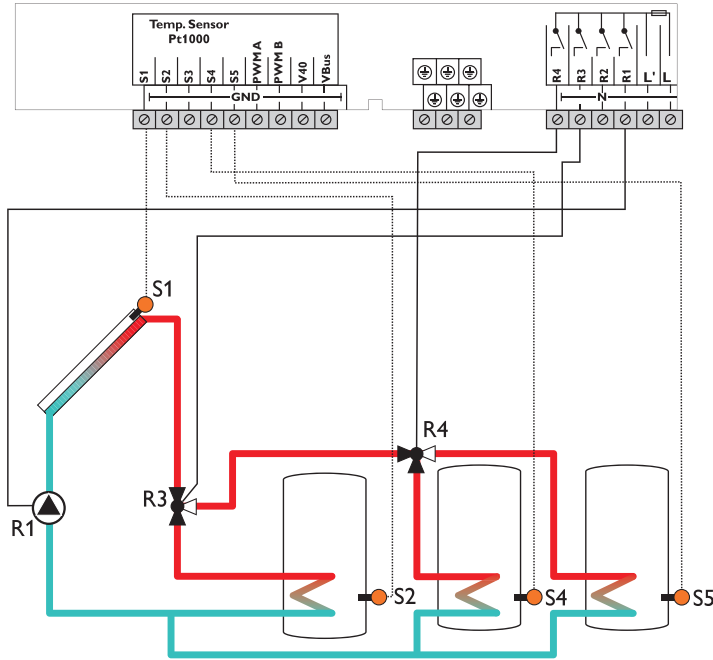

| Sensor/terminal | Designation | Description |
|-----------------|-------------|---|
| S1 | TCOL | Temperature collector |
| S2 | TST1B | Temperature tank 1 base |
| S3 | | Optional sensor for measurement purposes or options |
| S4 | TST2B | Temperature tank 2 base |
| S5 | TST3B | Temperature tank 3 base |
| V40 | | Optional sensor for measurement purposes or options |

| Relay | Description |
|-------|-------------------|
| R1 | Solar pump tank 1 |
| R2 | |
| R3 | Valve tank 1/2, 3 |
| R4 | Valve tank 2/3 |

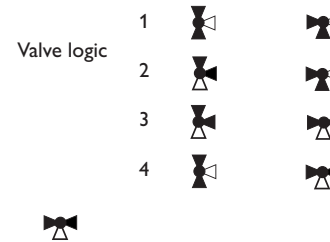

Flow direction when the valve is normally open

The controller compares the temperature at sensor S1 to the temperatures at sensors S2, S4 and S5. If the measured temperature differences are higher than the adjusted switch-on temperature differences, the pump (R1) will be activated and the corresponding tank will be loaded up to the adjusted maximum temperature via the valves (R3, R4). In this system, the desired tank sequence can be adjusted. Depending on the valve type used, the corresponding valve logic has to be selected.

Adjustment channels

| Channel | Sub channel 1 | Sub channel 2 | Factory setting | Change to | Description | Page |
|---------|---------------|---------------|-------------------|-----------|--|------|
| ARR | | | 1 | 5 | System | 45 |
| ROSA | | | 0000 | 225 | ROSA number | 66 |
| VLOG | | | 1 | | Valve logic | 67 |
| LOAD1 > | | | | | Loading 1 | |
| | DT1O | | 6.0 K [12.0 °Ra] | | Switch-on temperature difference 1 | 46 |
| | DT1F | | 4.0 K [8.0 °Ra] | | Switch-off temperature difference 1 | 46 |
| | DT1S | | 10.0 K [20.0 °Ra] | | Set temperature difference 1 | 46 |
| | RIS1 | | 2 K [4 °Ra] | | Rise 1 | 46 |
| | S1MAX | | 60 °C [140 °F] | | Tank maximum limitation 1 | 46 |
| | SMXS1 | | 2 | | Sensor tank max 1 | 46 |
| LOAD2 > | | | | | Loading 2 | |
| | DT2O | | 6.0 K [12.0 °Ra] | | Switch-on temperature difference 2 | 46 |
| | DT2F | | 4.0 K [8.0 °Ra] | | Switch-off temperature difference 2 | 46 |
| | DT2S | | 10.0 K [20.0 °Ra] | | Set temperature difference 2 | 46 |
| | RIS2 | | 2 K [4 °Ra] | | Rise 2 | 46 |
| | S2MAX | | 60 °C [140 °F] | | Sensor tank max 2 | 46 |
| | LST2 | | ON | | Loading tank 2 | 47 |
| LOAD3 | | | | | Loading 3 | |
| | DT3O | | 6.0 K [12.0 °Ra] | | Switch-on temperature difference 3 | 46 |
| | DT3F | | 4.0 K [8.0 °Ra] | | Switch-off temperature difference 3 | 46 |
| | DT3S | | 10.0 K [20.0 °Ra] | | Set temperature difference 3 | 46 |
| | RIS3 | | 2 K [4 °Ra] | | Rise 3 | 46 |
| | S3MAX | | 60 °C [140 °F] | | Sensor tank max 3 | 46 |
| | LST3 | | ON | | Loading tank 3 | 47 |
| COL > | | | | | Collector | |
| | CEM | | 130 °C [270 °F] | | Collector emergency temperature | 48 |
| | OCCO* | | OFF | | Collector cooling option | 48 |
| | | CMAX | 110 °C [230 °F] | | Collector maximum temperature | 48 |
| | OCMN | | OFF | | Collector minimum limitation option | 49 |
| | | CMIN | 10.0 °C [50.0 °F] | | Minimum collector temperature | 49 |
| | OTCO | | OFF | | Evacuated tube collector function option | 49 |
| | | TCST | 07:00 | | Tube collector starting time | 49 |
| | | TCEN | 19:00 | | Tube collector ending time | 49 |
| | | TCRU | 30 s | | Tube collector runtime | 49 |
| | | TCIN | 30 min | | Tube collector standstill interval | 50 |
| | OCFR | | OFF | | Collector antifreeze option | 50 |
| | | CFR O | 4.0 °C [40.0 °F] | | Antifreeze temperature collector on | 50 |


Adjustment channels

| Channel | Sub channel 1 | Sub channel 2 | Factory setting | Change to | Description | Page |
|---------|---------------|---------------|------------------|-----------|--------------------------------------|------|
| | | CFR F | 5.0 °C [42.0 °F] | | Antifreeze temperature collector off | 50 |
| | | FRPST | 1 | | Antifreeze tank selection | 51 |
| LLOGI > | | | | | Loading logic | |
| | LOGIC | | PRIO | | Priority logic | 51 |
| | PRIO1 | | 1 | | Priority logic tank 1 | 51 |
| | OSTS | | OFF | | Tank set option | 53 |
| | | TST1 | 45 °C [120 °F] | | Set tank temperature tank 1 | 53 |
| | | TST2 | 45 °C [120 °F] | | Set tank temperature tank 2 | 53 |
| | | TSTS3 | 45 °C [120 °F] | | Set tank temperature tank 3 | 53 |
| | tLB | | 2 min | | Loading break time | 51 |
| | tRUN | | 15 min | | Circulation runtime | 51 |
| | PSPEE | | OFF | | Pause speed option | 54 |
| | PDELA | | OFF | | Pump delay option | 54 |
| COOL > | | | | | Cooling functions | |
| | OSYC* | | OFF | | System cooling | 55 |
| | OSTC | | OFF | | Tank cooling | 55 |
| | OHDP* | | OFF | | Heat dump | 56 |
| OTH > | | | | | Thermostat function option | 61 |
| PUMP > | | | | | Speed | |
| | PUMP1 | | PSOL | | Speed variant pump 1 | 47 |
| | PUMP2 | | PSOL | | Speed variant pump 2 | 47 |
| | PUMP3 | | OnOF | | Speed variant pump 3 | 47 |
| MAN > | | | | | Manual mode | |
| | MAN1 | | Auto | | Manual mode 1 | 61 |
| | MAN2 | | Auto | | Manual mode 2 | 61 |
| | MAN3 | | Auto | | Manual mode 3 | 61 |
| | MAN4 | | Auto | | Manual mode 4 | 61 |
| BLPR > | | | OFF | | Blocking protection | 61 |
| OTDIS > | | | OFF | | Thermal disinfection option | 62 |
| OPARR > | | | OFF | | Parallel relay option | 63 |
| OHQM > | | | OFF | | Energy metering option | 64 |
| DATE > | | | | | Enter date | 66 |
| LANG > | | | dE | | Language | 67 |
| UNIT > | | | °C | | Unit | 67 |
| OSDC > | | | | | SD card option | 67 |
| CODE | | | 0000 | | User code | 71 |
| RESET | | | OFF | | Factory setting | |

* are blocked against each other

System 6


3-tank solar system with pump logic and priority logic

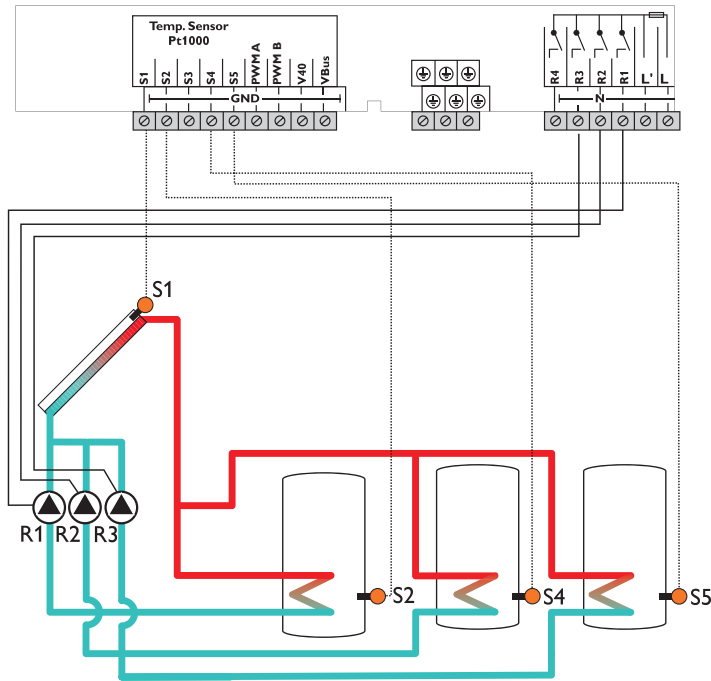

| Sensor/terminal | Designation | Description |
|-----------------|-------------|---|
| S1 | TCOL | Temperature collector |
| S2 | TST1B | Temperature tank 1 base |
| S3 | | Optional sensor for measurement purposes or options |
| S4 | TST2B | Temperature tank 2 base |
| S5 | TST3B | Temperature tank 3 base |
| V40 | | Optional sensor for measurement purposes or options |

| Relay | Description |
|-------|--|
| R1 | Solar pump tank 1 |
| R2 | Solar pump tank 2 |
| R3 | Solar pump tank 3 |
| R4 | optional: Thermal disinfection Parallel relay Heat dump |

The controller compares the temperature at sensor S1 to the temperatures at sensors S2, S4 and S5. If the measured temperature differences are higher than the adjusted switch-on temperature differences, the pump (R1, R2 and/or R3) will be activated and the corresponding tank will be loaded up to the adjusted maximum temperature at most. Priority loading or parallel loading can be carried out in this system.

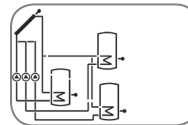


Adjustment channels

| Channel | Sub channel 1 | Sub channel 2 | Factory setting | Change to | Description | Page |
|---------|---------------|---------------|-------------------|-----------|--|------|
| ARR | | | 1 | 6 | System | 45 |
| ROSA | | | 0000 | 226 | ROSA number | 66 |
| LOAD1 > | | | | | Loading 1 | |
| | DT1O | | 6.0 K [12.0 °Ra] | | Switch-on temperature difference 1 | 46 |
| | DT1F | | 4.0 K [8.0 °Ra] | | Switch-off temperature difference 1 | 46 |
| | DT1S | | 10.0 K [20.0 °Ra] | | Set temperature difference 1 | 46 |
| | RIS1 | | 2 K [4 °Ra] | | Rise 1 | 46 |
| | S1MAX | | 60 °C [140 °F] | | Tank maximum limitation 1 | 46 |
| | SMXS1 | | 2 | | Sensor tank max 1 | 46 |
| LOAD2 > | | | | | Loading 2 | |
| | DT2O | | 6.0 K [12.0 °Ra] | | Switch-on temperature difference 2 | 46 |
| | DT2F | | 4.0 K [8.0 °Ra] | | Switch-off temperature difference 2 | 46 |
| | DT2S | | 10.0 K [20.0 °Ra] | | Set temperature difference 2 | 46 |
| | RIS2 | | 2 K [4 °Ra] | | Rise 2 | 46 |
| | S2MAX | | 60 °C [140 °F] | | Tank maximum limitation 2 | 46 |
| | LST2 | | ON | | Loading tank 2 | 47 |
| LOAD3 > | | | | | Loading 3 | |
| | DT3O | | 6.0 K [12.0 °Ra] | | Switch-on temperature difference 3 | 46 |
| | DT3F | | 4.0 K [8.0 °Ra] | | Switch-off temperature difference 3 | 46 |
| | DT3S | | 10.0 K [20.0 °Ra] | | Set temperature difference 3 | 46 |
| | RIS3 | | 2 K [4 °Ra] | | Rise 3 | 46 |
| | S3MAX | | 60 °C [140 °F] | | Tank maximum limitation 3 | 46 |
| | LST3 | | ON | | Loading tank 3 | 47 |
| COL > | | | | | Collector | |
| | CEM | | 130 °C [270 °F] | | Collector emergency temperature | 48 |
| | OCCO* | | OFF | | Collector cooling option | 48 |
| | | CMAX | 110 °C [230 °F] | | Collector maximum temperature | 48 |
| | OCMN | | OFF | | Collector minimum limitation option | 49 |
| | | CMIN | 10.0 °C [50.0 °F] | | Minimum collector temperature | 49 |
| | OTCO | | OFF | | Evacuated tube collector function option | 49 |
| | | TCST | 07:00 | | Tube collector starting time | 49 |
| | | TCEN | 19:00 | | Tube collector ending time | 49 |
| | | TCRU | 30 s | | Tube collector runtime | 49 |
| | | TCIN | 30 min | | Tube collector standstill interval | 50 |
| | O CFR | | OFF | | Collector antifreeze option | 50 |
| | | CFR O | 4.0 °C [40.0 °F] | | Antifreeze temperature collector on | 50 |
| | | CFR F | 5.0 °C [42.0 °F] | | Antifreeze temperature collector off | 50 |
| | | FRPST | 1 | | Antifreeze tank selection | 51 |
| LLOGI > | | | | | Loading logic | |


| Adjustment channels | | | | | | |
|---------------------|---------------|---------------|-----------------|-----------|-----------------------------|------|
| Channel | Sub channel 1 | Sub channel 2 | Factory setting | Change to | Description | Page |
| | LOGIC | | PRI0 | | Priority logic | 51 |
| | PRI01 | | 1 | | Priority logic tank 1 | 51 |
| | PRI02 | | 2 | | Priority logic tank 2 | 51 |
| | OSTS | | OFF | | Tank set option | 53 |
| | | TST1 | 45 °C [120 °F] | | Set tank temperature tank 1 | 53 |
| | | TST2 | 45 °C [120 °F] | | Set tank temperature tank 2 | 53 |
| | | TST3 | 45 °C [120 °F] | | Set tank temperature tank 3 | 53 |
| | OSE | | OFF | | Spread function option | 53 |
| | | DTSE | 20 K [40 °Ra] | | Spread difference | 54 |
| | | SLSTR | 1 | | Reference tank | 54 |
| | | SLSTA | 2 | | Absorption tank | 54 |
| | tLB | | 2 min | | Loading break time | 51 |
| | tRUN | | 15 min | | Circulation runtime | 51 |
| | PSPEE | | OFF | | Pause speed option | 54 |
| COOL > | | | | | Cooling functions | |
| | OSYC* | | OFF | | System cooling | 55 |
| | OSTC | | OFF | | Tank cooling | 55 |
| | OHDP* | | OFF | | Heat dump | 56 |
| OTH > | | | | | Thermostat function option | 61 |
| PUMP > | | | | | Speed | |
| | PUMP1 | | PSOL | | Speed variant pump 1 | 47 |
| | PUMP2 | | PSOL | | Speed variant pump 2 | 47 |
| | PUMP3 | | OnOff | | Speed variant pump 3 | 47 |
| MAN > | | | | | Manual mode | |
| | MAN1 | | Auto | | Manual mode 1 | 61 |
| | MAN2 | | Auto | | Manual mode 2 | 61 |
| | MAN3 | | Auto | | Manual mode 3 | 61 |
| | MAN4 | | Auto | | Manual mode 4 | 61 |
| BLPR > | | | OFF | | Blocking protection | 61 |
| OTDIS > | | | OFF | | Thermal disinfection option | 62 |
| OPARR > | | | OFF | | Parallel relay option | 63 |
| OHQM > | | | OFF | | Energy metering option | 64 |
| DATE > | | | | | Enter date | 66 |
| LANG > | | | dE | | Language | 67 |
| UNIT > | | | °C | | Unit | 67 |
| OSDC > | | | | | SD card option | 67 |
| CODE | | | 0000 | | User code | 71 |
| RESET | | | OFF | | Factory setting | |

* are blocked against each other

System 7 Solar system with tank loading in layers and 2nd tank

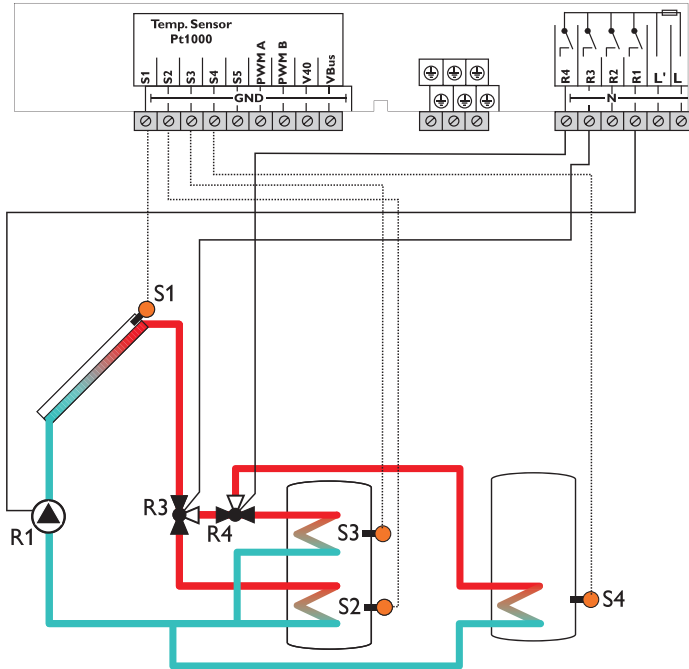

Valve logic

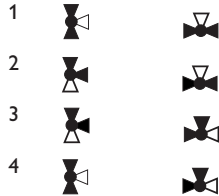

Flow direction when the valve is normally open




Note

A solar system with tank loading in layers is implemented as a 2-tank system. (tank base = tank 1; tank top = tank 2; additional tank = tank 3)

| Sensor/terminal | Designation | Description |
|-----------------|-------------|---|
| S1 | TCOL | Temperature collector |
| S2 | TST1B | Temperature tank 1 base (tank 1) |
| S3 | TST1T | Temperature tank 1 top (tank 2) |
| S4 | TST3B | Temperature tank 2 base (tank 3) |
| S5 | | Optional sensor for measurement purposes or options |
| V40 | | |

| Relay | Description |
|-------|--|
| R1 | Solar pump tank 1 |
| R2 | optional: Thermal disinfection Parallel relay Heat dump |
| R3 | Valve tank 1, 2/3 |
| R4 | Valve tank 2/3 |

The controller compares the temperature at sensor S1 to the temperatures at sensors S2, S3 and S4. If the measured temperature differences are higher than the adjusted switch-on temperature differences, the pump (R1) will be activated (see speed control) and the corresponding tank or tank zone will be loaded up to the adjusted maximum temperature via the valves (R3, R4). Depending on the valve type used, the corresponding valve logic has to be selected.

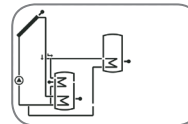

Adjustment channels

| Channel | Sub channel 1 | Sub channel 2 | Factory setting | Change to | Description | Page |
|---------|---------------|---------------|-------------------|-----------|--|------|
| ARR | | | 1 | 7 | System | 45 |
| ROSA | | | 0000 | 227 | ROSA number | 66 |
| VLOG | | | 1 | | Valve logic | |
| LOAD1 > | | | | | Loading 1 | |
| | DT1O | | 6.0 K [12.0 °Ra] | | Switch-on temperature difference 1 | 46 |
| | DT1F | | 4.0 K [8.0 °Ra] | | Switch-off temperature difference 1 | 46 |
| | DT1S | | 10.0 K [20.0 °Ra] | | Set temperature difference 1 | 46 |
| | RIS1 | | 2 K [4 °Ra] | | Rise 1 | 46 |
| | S1MAX | | 60 °C [140 °F] | | Tank maximum limitation 1 | 46 |
| | SMXS1 | | 2 | | Sensor tank max 1 | 46 |
| LOAD2 > | | | | | Loading 2 | |
| | DT2O | | 6.0 K [12.0 °Ra] | | Switch-on temperature difference 2 | 46 |
| | DT2F | | 4.0 K [8.0 °Ra] | | Switch-off temperature difference 2 | 46 |
| | DT2S | | 10.0 K [20.0 °Ra] | | Set temperature difference 2 | 46 |
| | RIS2 | | 2 K [4 °Ra] | | Rise 2 | 46 |
| | S2MAX | | 60 °C [140 °F] | | Tank maximum limitation 2 | 46 |
| | LST2 | | ON | | Loading tank 2 | 47 |
| LOAD3 > | | | | | | |
| | DT3O | | 6.0 K [12.0 °Ra] | | Switch-on temperature difference 3 | 46 |
| | DT3F | | 4.0 K [8.0 °Ra] | | Switch-off temperature difference 3 | 46 |
| | DT3S | | 10.0 K [20.0 °Ra] | | Set temperature difference 3 | 46 |
| | RIS3 | | 2 K [4 °Ra] | | Rise 3 | 46 |
| | S3MAX | | 60 °C [140 °F] | | Tank maximum limitation 3 | 46 |
| | SMXS3 | | 4 | | Sensor tank max 3 | 46 |
| | LST3 | | ON | | Loading tank 3 | 47 |
| COL > | | | | | Collector | |
| | CEM | | 130 °C [270 °F] | | Collector emergency temperature | 48 |
| | OCCO* | | OFF | | Collector cooling option | 48 |
| | | C MAX | 110 °C [230 °F] | | Collector maximum temperature | 48 |
| | OCMN | | OFF | | Collector minimum limitation option | 49 |
| | | C MIN | 10.0 °C [50.0 °F] | | Minimum collector temperature | 49 |
| | OTCO | | OFF | | Evacuated tube collector function option | 49 |
| | | TCST | 07:00 | | Tube collector starting time | 49 |
| | | TCEN | 19:00 | | Tube collector ending time | 49 |
| | | TCRU | 30 s | | Tube collector runtime | 49 |
| | | TCIN | 30 min | | Tube collector standstill interval | 50 |
| | O CFR | | OFF | | Collector antifreeze option | 50 |
| | | CFR O | 4.0 °C [40.0 °F] | | Antifreeze temperature collector on | 50 |


Adjustment channels

| Channel | Sub channel 1 | Sub channel 2 | Factory setting | Change to | Description | Page |
|---------|---------------|---------------|------------------|-----------|--------------------------------------|------|
| | | CFR F | 5.0 °C [42.0 °F] | | Antifreeze temperature collector off | 50 |
| | | FRPST | 1 | | Antifreeze tank selection | 51 |
| LLOGI > | | | | | Loading logic | |
| | LOGIC | | PRI0 | | Priority logic | 51 |
| | PRI01 | | 2 | | Priority logic tank 1 | 51 |
| | PRI02 | | 1 | | Priority logic tank 2 | 51 |
| | OSTS | | OFF | | Tank set option | 53 |
| | | TST1 | 45 °C [120 °F] | | Set tank temperature tank 1 | 53 |
| | | TST2 | 45 °C [120 °F] | | Set tank temperature tank 2 | 53 |
| | | TST3 | 45 °C [120 °F] | | Set tank temperature tank 3 | 53 |
| | tLB | | 2 min | | Loading break time | 51 |
| | tRUN | | 15 min | | Circulation runtime | 51 |
| | PSPEE | | OFF | | Pause speed option | 54 |
| | PDELA | | OFF | | Pump delay option | 54 |
| COOL > | | | | | Cooling functions | |
| | OSYC* | | OFF | | System cooling | 55 |
| | OSTC | | OFF | | Tank cooling | 55 |
| | OHDP* | | OFF | | Heat dump | 56 |
| OTH > | | | | | Thermostat function option | 61 |
| PUMP > | | | | | Speed | |
| | PUMP1 | | PSOL | | Speed variant pump 1 | 47 |
| | PUMP2 | | PSOL | | Speed variant pump 2 | 47 |
| | PUMP3 | | OnOF | | Speed variant pump 3 | 47 |
| MAN > | | | | | Manual mode | |
| | MAN1 | | Auto | | Manual mode 1 | 61 |
| | MAN2 | | Auto | | Manual mode 2 | 61 |
| | MAN3 | | Auto | | Manual mode 3 | 61 |
| | MAN4 | | Auto | | Manual mode 4 | 61 |
| BLPR > | | | OFF | | Blocking protection | 61 |
| OTDIS > | | | OFF | | Thermal disinfection option | 62 |
| OPARR > | | | OFF | | Parallel relay option | 63 |
| OHQM > | | | OFF | | Energy metering option | 64 |
| DATE > | | | | | Enter date | 66 |
| LANG > | | | dE | | Language | 67 |
| UNIT > | | | °C | | Unit | 67 |
| OSDC > | | | | | SD card option | 67 |
| CODE | | | 0000 | | User code | 71 |
| RESET | | | OFF | | Factory setting | |

* are blocked against each other

System 8

Solar system with east-/west collectors and 2 tanks (valve logic)

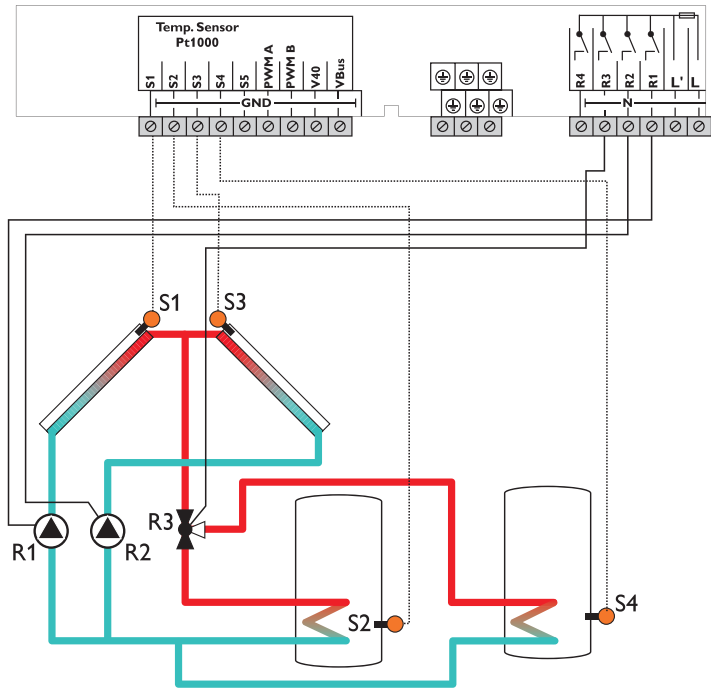


Note: 3-port valve normally open - tank 1 (S2)

| Sensor/terminal | Designation | Description |
|-----------------|-------------|---|
| S1 | TCOL1 | Temperature collector 1 |
| S2 | TST1B | Temperature tank 1 base |
| S3 | TCOL2 | Temperature collector 2 |
| S4 | TST2B | Temperature tank 2 base |
| S5 | | Optional sensor for measurement purposes or options |
| V40 | | |

| Relay | Description |
|-------|--|
| R1 | Solar pump collector 1 |
| R2 | Solar pump collector 2 |
| R3 | 3-port valve tank 1/2 |
| R4 | optional: Thermal disinfection Parallel relay Heat dump |

The controller compares the temperatures at the collector sensors S1 and S3 to the temperatures at S2 and S4. If one of the measured temperature differences is higher than the adjusted switch-on temperature differences, the corresponding pump (R1, R2) or both pumps will be activated and the corresponding tank will be loaded up to the adjusted maximum temperature via the valve (R3).

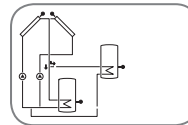

Adjustment channels



| Channel | Sub channel 1 | Sub channel 2 | Factory setting | Change to | Description | Page |
|---------|---------------|---------------|-------------------|-----------|--|------|
| ARR | | | 1 | 23 | System | 45 |
| ROSA | | | 0000 | 29 | ROSA number | |
| LOAD1 > | | | | | Loading 1 | |
| | DT1O | | 6.0 K [12.0 °Ra] | | Switch-on temperature difference 1 | 45 |
| | DT1F | | 4.0 K [8.0 °Ra] | | Switch-off temperature difference 1 | 45 |
| | DT1S | | 10.0 K [20.0 °Ra] | | Set temperature difference 1 | 45 |
| | RIS1 | | 2 K [4 °Ra] | | Rise 1 | 45 |
| | S1MAX | | 60 °C [140 °F] | | Tank maximum limitation 1 | 46 |
| | SMXS1 | | 2 | | Sensor tank max 1 | 46 |
| LOAD2 > | | | | | Loading 2 | |
| | DT2O | | 6.0 K [12.0 °Ra] | | Switch-on temperature difference 2 | 45 |
| | DT2F | | 4.0 K [8.0 °Ra] | | Switch-off temperature difference 2 | 46 |
| | DT2S | | 10.0 K [20.0 °Ra] | | Set temperature difference 2 | 46 |
| | RIS2 | | 2 K [4 °Ra] | | Rise 2 | 46 |
| | S2MAX | | 60 °C [140 °F] | | Tank maximum limitation 2 | 46 |
| | SMXS2 | | 4 | | Sensor tank max 2 | 46 |
| | LST2 | | ON | | Loading tank 2 | 47 |
| COL 1 > | | | | | Collector 1 | |
| | CEM1 | | 130 °C [270 °F] | | Collector emergency temperature 1 | 48 |
| | OCCO1* | | OFF | | Collector cooling option 1 | 48 |
| | | CMAX1 | 110 °C [230 °F] | | Maximum collector temperature 1 | 48 |
| | OCSI1 | | OFF | | Collector minimum limitation option 1 | 49 |
| | | CMIN1 | 10.0 °C [50.0 °F] | | Minimum collector temperature 1 | 49 |
| | OTCO1 | | OFF | | Evacuated tube collector function option 1 | 49 |
| | | TCST1 | 07:00 | | Tube collector starting time 1 | 49 |
| | | TCEN1 | 19:00 | | Tube collector ending time 1 | 49 |
| | | TCRU1 | 30 s | | Tube collector runtime 1 | 49 |
| | | TCIN1 | 30 min | | Tube collector standstill interval 1 | 50 |
| | O CFR | | OFF | | Collector antifreeze option | 50 |
| | | CFR O | 4.0 °C [40.0 °F] | | Antifreeze temperature collector on | 50 |
| | | CFR F | 5.0 °C [42.0 °F] | | Antifreeze temperature collector off | 50 |
| | | FRPST | 1 | | Antifreeze tank selection | 50 |
| COL 2 > | | | | | Collector 2 | |
| | CEM2 | | 130 °C [270 °F] | | Collector emergency temperature 2 | 48 |
| | OCCO2* | | OFF | | Collector cooling option 2 | 48 |
| | | CMAX2 | 110 °C [230 °F] | | Maximum collector temperature 2 | 48 |
| | OCSI2 | | OFF | | Collector minimum limitation option 2 | 49 |
| | | CMIN2 | 10.0 °C [50.0 °F] | | Minimum collector temperature 2 | 49 |
| | OTCO2 | | OFF | | Evacuated tube collector function option 2 | 49 |
| | | TCST2 | 07:00 | | Tube collector starting time 2 | 49 |

| Adjustment channels | | | | | | |
|---------------------|---------------|---------------|-----------------|-----------|--------------------------------------|------|
| Channel | Sub channel 1 | Sub channel 2 | Factory setting | Change to | Description | Page |
| | | TCEN2 | 19:00 | | Tube collector ending time 2 | 49 |
| | | TCRU2 | 30 s | | Tube collector runtime 2 | 49 |
| | | TCIN2 | 30 min | | Tube collector standstill interval 2 | 49 |
| LLOGI > | | | | | Loading logic | |
| | LOGIC | | PRIO | | Priority logic | 51 |
| | PRIO1 | | 1 | | Priority logic tank 1 | 51 |
| | OSTS | | OFF | | Tank set option | 51 |
| | | TST1 | 45 °C [120 °F] | | Set tank temperature tank 1 | 51 |
| | | TST2 | 45 °C [120 °F] | | Set tank temperature tank 2 | 51 |
| | tLB | | 2 min | | Loading break time | 51 |
| | tRUN | | 15 min | | Circulation runtime | 51 |
| | PSPEE | | OFF | | Pause speed option | 54 |
| | PDELA | | OFF | | Pump delay option | 54 |
| COOL > | | | | | Cooling functions | |
| | OSYC* | | OFF | | System cooling | 55 |
| | OSTC | | OFF | | Tank cooling | 55 |
| | OHDP* | | OFF | | Heat dump | 55 |
| OTH > | | | | | Thermostat function option | 61 |
| PUMP > | | | | | Speed | |
| | PUMP1 | | PSOL | | Speed variant pump 1 | 47 |
| | PUMP2 | | PSOL | | Speed variant pump 2 | 47 |
| | PUMP3 | | OnOF | | Speed variant pump 3 | 47 |
| MAN > | | | | | Manual mode | |
| | MAN1 | | Auto | | Manual mode 1 | 61 |
| | MAN2 | | Auto | | Manual mode 2 | 61 |
| | MAN3 | | Auto | | Manual mode 3 | 61 |
| | MAN4 | | Auto | | Manual mode 4 | 61 |
| BLPR > | | | OFF | | Blocking protection | 61 |
| OTDIS > | | | OFF | | Thermal disinfection option | 62 |
| OPARR > | | | OFF | | Parallel relay option | 63 |
| OHQM > | | | OFF | | Energy metering option | 64 |
| DATE> | | | | | Enter date | 64 |
| LANG > | | | dE | | Language | 67 |
| UNIT > | | | °C | | Unit | 67 |
| OSDC > | | | | | SD card option | 67 |
| CODE | | | 0000 | | User code | 71 |
| RESET | | | OFF | | Factory setting | |

* are blocked against each other

System 9

3-tank solar system with east-/west collectors

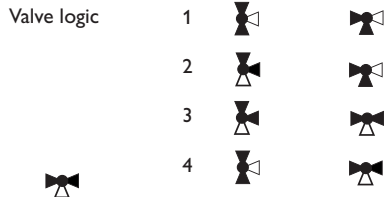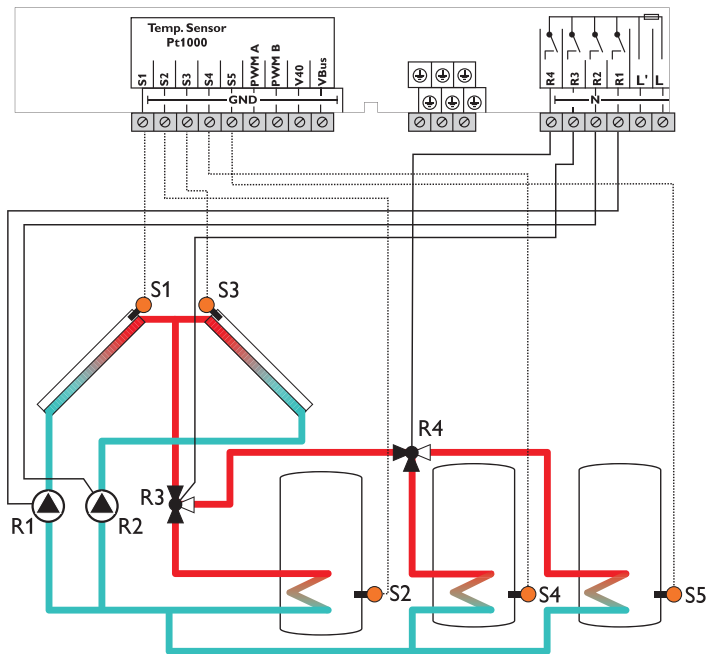


Flow direction when the valve is normally open

| Sensor/terminal | Designation | Description |
|-----------------|-------------|-------------------------|
| S1 | TCOL | Temperature collector 1 |
| S2 | TST1B | Temperature tank 1 base |
| S3 | TCOL2 | Temperature collector 2 |
| S4 | TST2B | Temperature tank 2 base |
| S5 | TST3B | Temperature tank 3 base |
| V40 | | optional: flowmeter |

| Relay | Description |
|-------|-------------------|
| R1 | Solar pump tank 1 |
| R2 | Solar pump tank 2 |
| R3 | Valve tank 1/2, 3 |
| R4 | Valve tank 2/3 |

The controller compares the temperatures at the collector sensors S1 and S3 to the tank temperatures at the sensors S2, S4 and S5. If one of the measured temperature differences is higher than the adjusted switch-on temperature differences, the corresponding pump (R1, R2) will be activated and the corresponding tank will be loaded up to the adjusted maximum temperature via the valves R3, R4. In this system, one of the tanks can be loaded with priority.

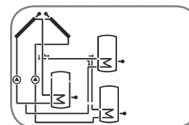


| Adjustment channels | | | | | | |
|---------------------|---------------|---------------|-------------------|-----------|--|------|
| Channel | Sub channel 1 | Sub channel 2 | Factory setting | Change to | Description | Page |
| ARR | | | 1 | 9 | System | 45 |
| ROSA | | | 0000 | 228 | ROSA number | 66 |
| VLOG | | | 1 | | Valve logic | |
| LOAD1 > | | | | | Loading 1 | |
| | DT1O | | 6.0 K [12.0 °Ra] | | Switch-on temperature difference 1 | 46 |
| | DT1F | | 4.0 K [8.0 °Ra] | | Switch-off temperature difference 1 | 46 |
| | DT1S | | 10.0 K [20.0 °Ra] | | Set temperature difference 1 | 46 |
| | RIS1 | | 2 K [4 °Ra] | | Rise 1 | 46 |
| | S1MAX | | 60 °C [140 °F] | | Tank maximum limitation 1 | 46 |
| LOAD2 > | | | | | Loading 2 | |
| | DT2O | | 6.0 K [12.0 °Ra] | | Switch-on temperature difference 2 | 46 |
| | DT2F | | 4.0 K [8.0 °Ra] | | Switch-off temperature difference 2 | 46 |
| | DT2S | | 10.0 K [20.0 °Ra] | | Set temperature difference 2 | 46 |
| | RIS2 | | 2 K [4 °Ra] | | Rise 2 | 46 |
| | S2MAX | | 60 °C [140 °F] | | Tank maximum limitation 2 | 46 |
| | LST2 | | ON | | Loading tank 2 | 47 |
| LOAD3 > | | | | | Loading 2 | |
| | DT3O | | 6.0 K [12.0 °Ra] | | Switch-on temperature difference 3 | 46 |
| | DT3F | | 4.0 K [8.0 °Ra] | | Switch-off temperature difference 3 | 46 |
| | DT3S | | 10.0 K [20.0 °Ra] | | Set temperature difference 3 | 46 |
| | RIS3 | | 2 K [4 °Ra] | | Rise 3 | 46 |
| | LST3 | | ON | | Loading tank 3 | 47 |
| COL 1 > | | | | | Collector | |
| | CEM | | 130 °C [270 °F] | | Collector emergency temperature | 48 |
| | OCCO* | | OFF | | Collector cooling option | 48 |
| | | CMAX | 110 °C [230 °F] | | Collector maximum temperature | 48 |
| | OCMN | | OFF | | Collector minimum limitation option | 49 |
| | | CMIN | 10.0 °C [50.0 °F] | | Minimum collector temperature | 49 |
| | OTCO | | OFF | | Evacuated tube collector function option | 49 |
| | | TCST | 07:00 | | Tube collector starting time | 49 |
| | | TCEN | 19:00 | | Tube collector ending time | 49 |
| | | TCRU | 30 s | | Tube collector runtime | 49 |
| | | TCIN | 30 min | | Tube collector standstill interval | 50 |
| | OCFR | | OFF | | Collector antifreeze option | 50 |
| | | CFR O | 4.0 °C [40.0 °F] | | Antifreeze temperature collector on | 50 |
| | | CFR F | 5.0 °C [42.0 °F] | | Antifreeze temperature collector off | 50 |
| | | FRPST | 1 | | Antifreeze tank selection | 51 |
| COL 2 > | | | | | Collector 2 | |
| | CEM2 | | 130 °C [270 °F] | | Collector emergency temperature 2 | 48 |
| | OCCO2* | | OFF | | Collector cooling option 2 | 48 |

| Adjustment channels | | | | | | |
|---------------------|---------------|---------------|-------------------|-----------|--|------|
| Channel | Sub channel 1 | Sub channel 2 | Factory setting | Change to | Description | Page |
| | | CMAx2 | 110 °C [230 °F] | | Maximum collector temperature 2 | 48 |
| | OCMI2 | | OFF | | Collector minimum limitation option 2 | 49 |
| | | CMIx2 | 10.0 °C [50.0 °F] | | Minimum collector temperature 2 | 49 |
| | OTCO2 | | OFF | | Evacuated tube collector function option 2 | 49 |
| | | TCST2 | 07:00 | | Tube collector starting time 2 | 49 |
| | | TCEN2 | 19:00 | | Tube collector ending time 2 | 49 |
| | | TCRU2 | 30 s | | Tube collector runtime 2 | 49 |
| | | TCIN2 | 30 min | | Tube collector standstill interval 2 | 49 |
| LLOGI > | | | | | Loading logic | |
| | LOGIC | | PRIO | | Priority logic | 51 |
| | PRIO1 | | 1 | | Priority logic tank 1 | 51 |
| | PRIO2 | | 2 | | Priority logic tank 2 | 51 |
| | OSTS | | OFF | | Tank set option | 53 |
| | | TST1 | 45 °C [120 °F] | | Set tank temperature tank 1 | 53 |
| | | TST2 | 45 °C [120 °F] | | Set tank temperature tank 2 | 53 |
| | | TST3 | 45 °C [120 °F] | | Set tank temperature tank 3 | 53 |
| | tLB | | 2 min | | Loading break time | 51 |
| | tRUN | | 15 min | | Circulation runtime | 51 |
| | PSPEE | | OFF | | Pause speed option | 54 |
| | PDELA | | OFF | | Pump delay option | 54 |
| COOL > | | | | | Cooling functions | |
| | OSYC* | | OFF | | System cooling | 55 |
| | OSTC | | OFF | | Tank cooling | 55 |
| PUMP > | | | | | Speed | |
| | PUMP1 | | PSOL | | Speed variant pump 1 | 47 |
| | PUMP2 | | PSOL | | Speed variant pump 2 | 47 |
| | PUMP3 | | OnOF | | Speed variant pump 3 | 47 |
| MAN > | | | | | Manual mode | |
| | MAN1 | | Auto | | Manual mode 1 | 61 |
| | MAN2 | | Auto | | Manual mode 2 | 61 |
| | MAN3 | | Auto | | Manual mode 3 | 61 |
| | MAN4 | | Auto | | Manual mode 4 | 61 |
| BLPR > | | | OFF | | Blocking protection | 61 |
| OHQM > | | | OFF | | Energy metering option | 64 |
| DATE > | | | | | Enter date | 66 |
| LANG > | | | dE | | Language | 67 |
| UNIT > | | | °C | | Unit | 67 |
| OSDC > | | | | | SD card option | 67 |
| CODE | | | 0000 | | User code | |
| RESET | | | OFF | | Factory setting | |

* are blocked against each other

Electrical connection of a high-efficiency pump (HE pump)

Speed control of a HE pump is possible via a PWM signal. In addition to the relay connection, the pump must also be connected to the controller via the VBus®/ PWM interface adapter. In the PUMP adjustment channel, ADAP has to be selected.

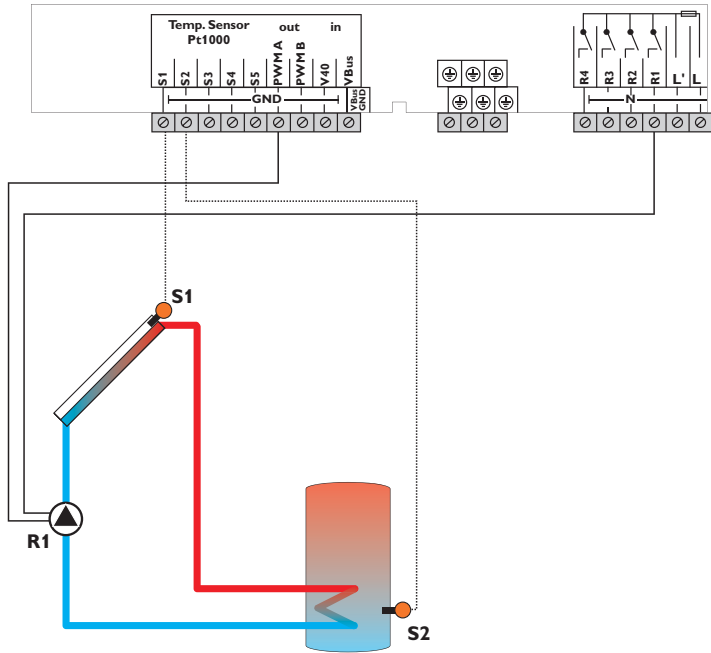


Note:

For more information on pump control see page 47.

3 Operation and function

3.1 Buttons

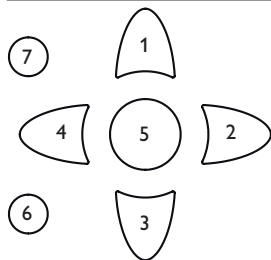

The controller is operated via the 7 buttons next to the display. They have the following functions:

Button ① - scrolling upwards

Button ③ - scrolling downwards

Button ② - increasing adjustment values

Button ④ - reducing adjustment values

Button ⑤ - confirming

Button ⑥ - menu button for changing between the status and the menu level

Button ⑦ - escape button for changing into the previous menu

3.2 Selecting menu points and adjusting values

During normal operation of the controller, the display is in the status level.

In order to leave the status level and access the menu level, press button 6.

The display indicates the level with the selectable menus. In order to change the parameters of a menu item, select the menu item and press button 5. The display changes to the adjustment level. The adjustment channels are characterized by the indication **SET**.

- ➔ Select the desired channel by pressing the buttons ① and ③
- ➔ Confirm the selection with button ⑤. **SET** starts flashing (adjustment mode)
- ➔ Adjust the value, the function or the option using the buttons ② and ④
- ➔ Confirm the selection with button ⑤. **SET** permanently appears, the adjustment has been saved.

If no button has been pressed within a couple of minutes, the adjustment is cancelled and the previous value is retained.

3.3 Menu structure

Status level

TCOL

TST1B

...

Menu level

ARR

LOAD1

LOAD2

LOAD3

COL

COL1

COL2

LLOGI

...

Adjustment level

DT O

DT F

DT S

RIS

S MAX

SMXS

...

The menu structure of the controller consists of 3 levels: the status level, the menu level and the adjustment level.

The status level consists of different display channels which indicate display values and messages.

The menu level consists of different menu items each of which is divided into sub-menus and adjustment channels. Each of these menu items represents a function or option which can be selected. If a function or option is selected, the controller changes to the adjustment level in which the corresponding parameters of the function or option are available.

In order to activate or deactivate a function, it must be selected in the menu level. The display changes to the adjustment menu in which all adjustments required can be carried out.

During normal operation of the controller, the display is in the status level.



Note

Some of the menu items depend on the selected system and the adjusted options. Therefore, they are only displayed if they are available.




Note

The abstract from the menu structure shown page 36 is for information on the structure of the controller menu and is therefore not complete.

Menu level

If it is possible to jump into a sub-level, **PUSH** is indicated below the menu item. Use button ⑤ to access the menu. In order to leave the menu, press button ⑦. If an option is deactivated, it will appear in the menu level with the addition **OFF**.

3.4 Shortcut

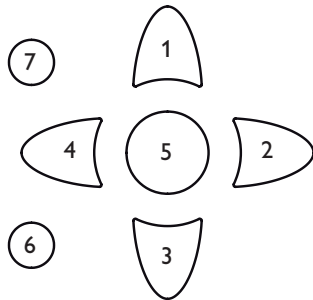


The controller is equipped with a shortcut that enables a quick access to the **MAN** menu (manual mode).

→ In order to access the **MAN** menu, press buttons ⑥ and ⑦ at the same time, then press button ②.

3.5 Indications and system monitoring display

The system monitoring display consists of 3 areas: channel display, tool bar and system screen.

Channel display

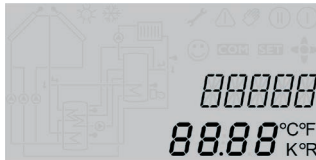

The channel display consists of 2 lines. The upper display line is an alphanumeric 16-segment display. In this line, mainly channel names and menu items are displayed. In the lower 7-segment display, channel values and the adjustment parameters are displayed.

Temperatures and temperature differences are indicated with the unit (°C/°F or K/°R respectively).

Tool bar




The additional symbols in the tool bar indicate the current system state.


| Symbol | normal | flashing |
|------------|--|--|
| ① | Relay active | |
| ☀ | Maximum tank limitation active / maximum tank temperature exceeded | Collector cooling function active System cooling, tank cooling active |
| ❄ | Antifreeze function activated | Collector minimum limitation active Antifreeze function active |
| ⚠ | | Collector emergency shutdown |
| ⚠ + 🛠 | | Sensor fault |
| ⚠ + 🤝 | | Manual mode active |
| ⚠ + ☀ | | Tank emergency shutdown active |
| SET | | Adjustment channel is being changed (set mode) |
| COM | SD card is being used | SD card is full |
| ➡ | Indication of the buttons available in the menu item | |
| 😊 | Normal operation | |

System screen in the system monitoring display

The system selected is indicated in the system monitoring display. It consists of several system component symbols which are – depending on the current status of the system – either flashing, permanently shown or “hidden”.

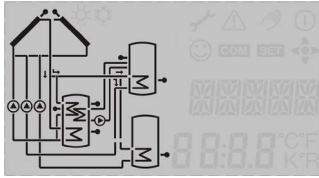

Collectors with collector sensor



Tanks 1, 2 and 3 with heat exchanger



3-port valves


Only the flow direction or current switching position are indicated.



Temperature sensor



Pump

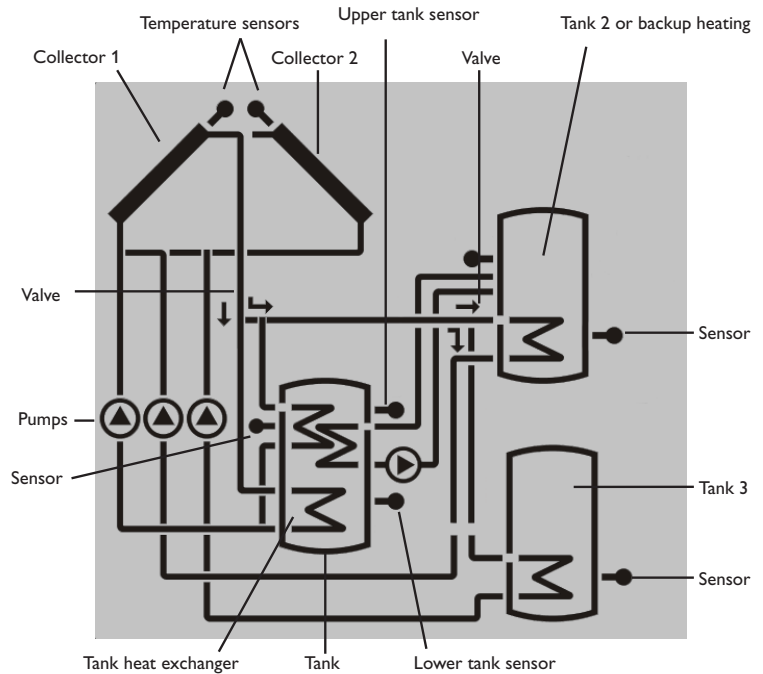

3.6 Further indications

Fault indication

If the controller detects a malfunction, the directional pad flashes red and the symbols of the warning triangle and the wrench are additionally displayed.

Smiley

If the controller operates faultlessly (normal operation), a smiley is displayed.

4 Status menu

During normal operation of the controller, the display is in the status level. This one indicates the measurement values shown in the table.

In addition to the display values, possible error messages are indicated in the status menu (see page 71).

| Display | Description |
|---------|---|
| BLPR1 | Blocking protection R1 |
| BLPR2 | Blocking protection R2 |
| BLPR3 | Blocking protection R3 |
| BLPR4 | Blocking protection R4 |
| DTFCT | Differential function active |
| THERM | Thermostat function active |
| TCOL | Temperature collector |
| TCOL1 | Temperature collector 1 |
| TST1B | Temperature tank 1 base |
| TSTT | Temperature tank top |
| S3 | Temperature sensor 3 |
| TST2B | Temperature tank 2 base |
| TST3B | Temperature tank 3 base |
| TST2T | Temperature tank 2 top |
| S4 | Temperature sensor 4 |
| TCOL2 | Temperature collector 2 |
| S5 | Temperature sensor 5 |
| DTS1 | Temperature heat source ΔT function |
| DTS2 | Temperature heat sink ΔT function |
| SENTH | Temperature thermostat function |

| Display | Description |
|---------|---|
| TFHQM | Temperature flow energy metering |
| TRHQM | Temperature return energy metering |
| n1 % | Speed relay 1 |
| n2 % | Speed relay 2 |
| n3 % | Speed relay 3 |
| h R1 | Operating hours relay 1 |
| h R2 | Operating hours relay 2 |
| h R3 | Operating hours relay 3 |
| h R4 | Operating hours relay 4 |
| L/h | Flow rate |
| kWh | Heat quantity in kWh |
| MWh | Heat quantity in MWh |
| TDIS | Temperature thermal disinfection |
| CDIS | Countdown of monitoring period (thermal disinfection) |
| DDIS | Countdown of heating period (thermal disinfection) |
| TIME | Time |
| DATE | Date |

5 Initial commissioning


When the hydronic system is filled and ready for operation, connect the controller to the mains.

The controller runs an initialization phase in which all symbols are indicated in the display. The directional pad flashes red.

When the controller is commissioned for the first time or when it is reset, it will run a commissioning menu after the initialization phase. The commissioning menu leads the user through the most important adjustment channels needed for operating the system and starts with the indication of the BX L version number.


Commissioning menu

The commissioning menu consists of the channels described in the following. In order to make an adjustment, push button (5). The set symbol flashes and the adjustment can be made. Confirm the adjustment with button (5). Push button (3), the next channel will appear in the display.

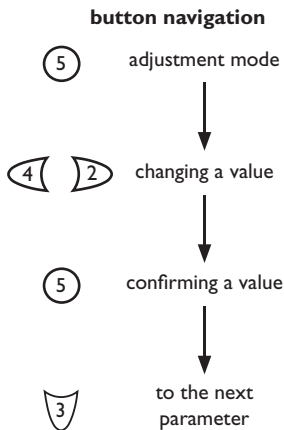

1. Language:

→ Adjust the desired menu language.



2. Unit:

→ Adjust the desired unit.





3. Time:

→ Adjust the clock time. First of all adjust the hours, then the minutes.



4. Date:

→ Adjust the date. First of all adjust the year, then the month and then the day.



Note

If the desired system layout has been selected in the ARR channel, the ROSA channel can be skipped.



5. System:

→ Adjust the desired system.



6. ROSA:

→ Enter the 4-digit number given by the RESOL Online Service Assistant.




7. Valve logic:

- Adjust the valve variant of the 3-port valves

8. Maximum tank temperature:

- Adjust the maximum tank temperature
In 3-tank systems, the adjustment has to be carried out for **S2MAX** and **S3MAX** as well.



9. Loading tank 2 and tank 3

- Switch on or off the “loading tank 2”/“loading tank 3” option.



10. Pump control type:

- Adjust the type of pump control for **PUMP1**.
Carry out this adjustment for PUMP2, PUMP3 if needed.



11. Minimum speed:

- Adjust the minimum speed of the pump PUMP1.
For systems with 3 pumps, the adjustments must also be carried out for PUMP2, PUMP3



12. Maximum speed:

- Adjust the maximum speed of the pump PUMP1.
For systems with 2 or 3 pumps, the adjustments must also be made for PUMP2, PUMP3.



- **Complete the commissioning menu by pressing button 5:**

The controller is then ready for operation and normally the factory settings will give close to optimum operation.



Note

The valve variant can only be adjusted in systems with two 3-port valves (ARR 5,7,9).



Note

“Loading tank 3” can only be adjusted if a 3-tank system or tank loading in layers has been selected in the sub-channel **ARR**.



Note

The minimum speed can only be adjusted if burst control (PULS) or speed control via an adapter (ADAP) has been selected in the sub-channel **PUMP1,2,3**.



Note

The maximum speed can only be adjusted if burst control (PULS) or speed control via an adapter (ADAP) has been selected in the sub-channel **PUMP1,2,3**.

6 Functions and options


6.1 Status level



Note

The values and adjustment channels shown depend on the selected system, the functions and options and will only be displayed in the installer level.

Display of collector temperatures

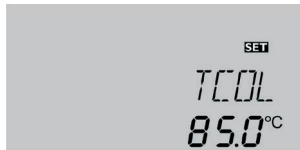

TCOL(1, 2)


Collector temperature

Display range: -40... +260 °C [-40.0... 500.0 °F]

Displays the current collector temperature.

- TCOL : Collector temperature (1-collector system)
- TCOL1 : Collector temperature 1 (2-collector system)
- TCOL2 : Collector temperature 2 (2-collector system)

Display of tank temperatures

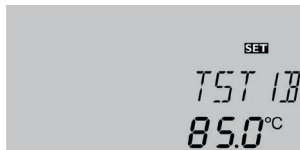

TST1 (2, 3)B, TST1 (2)T


Tank temperatures

Display range: -40... +260 °C [-40.0... 500.0 °F]

Displays the current tank temperature.

- TST1T : Temperature tank 1 top
 - TST1B : Temperature tank 1 base
 - TST2T : Temperature tank 2 top
 - TST2B : Temperature tank 2 base
- in 3-tank systems only:
- TST3B : Temperature tank 3 base

Display of temperatures at S3, S4 and S5

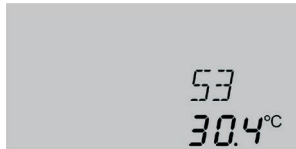

S3, S4, S5

Sensor temperatures

Display range: -40... +260 °C [-40.0... 500.0 °F]

Indicates the current temperature at the corresponding additional sensor (without control function).

- S3 : Temperature sensor 3
- S4 : Temperature sensor 4
- S5 : Temperature sensor 5



Note

Only if temperature sensors are connected, will S3, S4 and S5 be displayed.



Note

For heat exchange etc., S3/S5 are used as heat source/heat sink sensor respectively.

Display of further temperatures



DTS1, DTS2, SENTH, TFHQM, TRHQM


Further measured temperatures

Display range: -40... +260 °C [-40.0... 500.0 °F]

Indicates the current temperature at the corresponding sensor. The display of these temperatures depends on the system selected.

- DTS1 : Temperature heat source ΔT function
- DTS2 : Temperature heat sink ΔT function
- SENTH : Temperature thermostat function
- TFHQM : Temperature flow (HQM)
- TRHQM : Temperature return (HQM)

Display of flow rate

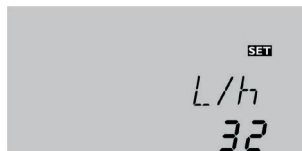

L/h


Flow rate

Display range: 0 ... 9999 l/h

Indicates the flow rate in the solar system during energy metering.

During heat quantity balancing, the fixed flow rate value adjusted is indicated.

Display of speed

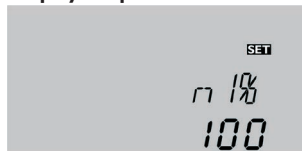

N1%, N2%, N3%


Current pump speed

Display range: 30 ... 100%

20 ... 100% if ADAP is adjusted

Indicates the current speed of the corresponding pump.

Operating hours counter

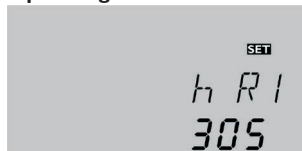

H R { 1, 2, 3, 4 }

Operating hours counter


The operating hours counter accumulates the solar operating hours of the relay (hR1/hR2/hR3/hR4). Full hours are displayed.

The accumulated operating hours value can be set back to 0. As soon as one operating hours channel is selected, the symbol **SET** is displayed.

→ In order to access the RESET mode of the counter, press the set button .

The **SET** symbol flashes and the security enquiry appears.

→ Confirm the security enquiry by selecting “Yes”

→ Confirm the reset with the set button  in order to finish the reset.

In order to interrupt the RESET process, do not press any button for about 5 s. The display returns to the display mode.

Display of heat quantity



kWh/MWh:

Heat quantity in kWh/MWh

Indicates the heat quantity produced in the system. For this purpose, the energy metering option has to be activated.

The flow rate as well as the values of the reference sensors S1 (flow) and S4 (return) are used for calculating the heat quantity supplied. It is shown in kWh in the channel **kWh** and in MWh in the channel **MWh**. The overall heat quantity results from the sum of both values.

The accumulated heat quantity value can be set back to 0. As soon as one of the display channels of the heat quantity is selected, the **SET** symbol is displayed.

→ In order to access the RESET mode of the counter, press the set button .


The **SET** symbol flashes and the security enquiry appears.

→ Confirm the security enquiry by selecting “Yes”

→ Confirm the reset with the set button in order to finish the reset.

In order to interrupt the RESET process, no button should be pressed for about 5 s. The display returns to the display mode.

Display of monitoring period

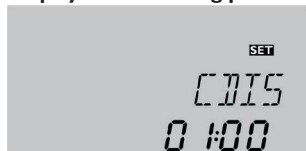


CDIS

Countdown of the monitoring period

Display range: 0 ... 30:0 ... 24 (dd:hh)

If the thermal disinfection option (**OTDIS**) is activated and the monitoring period is in progress, the remaining time of the monitoring period is displayed as **CDIS** (in hours and minutes), counting backwards.

Display of starting time

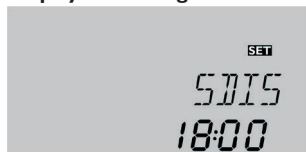


SDIS

Starting time

Display range: 0:00 ... 24:00 (o'clock)

If the thermal disinfection option (**OTDIS**) is activated and starting delay time has been adjusted, the adjusted delay time is displayed (flashing) in this channel.

Display of heating period

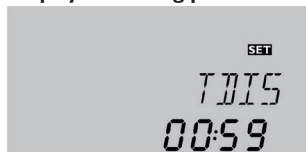


TDIS

Heating period

Display range: 0:00 ... 23:59 (hh:mm)

If the thermal disinfection option (**OTDIS**) is activated and the heating period is in progress, the remaining time of the heating period is displayed (in hours and minutes) in this channel, counting backwards.

Display of time

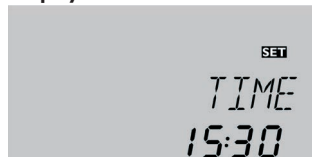

TIME

Time

Adjust the current clock time.

The following display channels are only indicated when the corresponding function is active.

Display ΔT function active



DTFCT

ΔT function active


Display thermostat function active



THERM

Thermostat function active

Display of blocking protection time

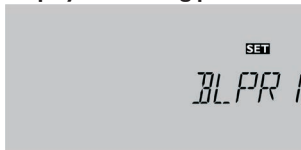

BLPR(2, 3, 4)

Blocking protection active

In order to protect the pumps against blocking after standstill, the controller is equipped with a blocking protection function. When the blocking protection is activated, this function switches on the relays one after another every day at 12:00 a.m. for 10 s at 100%.

6.2 Adjustment channels



Note

If the controller is commissioned for the first time, the commissioning menu will start. Selecting a new system subsequently will reset all other adjustments to the factory settings.

Selecting the system



ARR

System


Adjustment range: 1 ... 9

Factory setting: 1

Selection of the appropriate system. Each system has pre-programmed options and adjustments which can be activated or changed respectively if necessary.

Select the system first (see chap. 3).

ΔT control

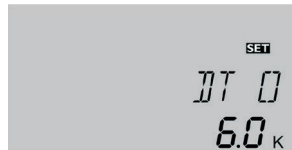

LOAD(1, 2, 3) / DT(2, 3) 0

Switch-on temperature diff.

Adjustment range: 1.0 ... 50.0 K [2.0 ... 90.0 °Ra]
in steps of 0.5 K [1.0 °Ra]

Factory setting: 6.0 K [12.0 °Ra]

The controller works as a standard differential controller. If the switch-on difference is reached, the pump is activated. When the temperature difference reaches or falls below the adjusted switch-off temperature difference, the respective relay switches off.



LOAD(1, 2, 3) / DT(2, 3) F

Switch-off temperature diff.

Adjustment range: 0.5 ... 49.5 K [1.0 ... 89.0 °Ra]
in steps of 0.5 K [1.0 °Ra]


Factory setting: 4.0 K [8.0 °Ra]



Note

The switch-on temperature difference must be at least 0.5 K [1.0 °Ra] higher than the switch-off temperature difference. The set temperature difference must be at least 0.5 K [1.0 °Ra] higher than the switch-on temperature difference.

Speed control

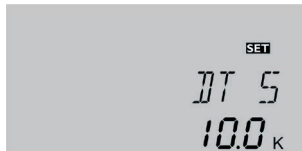

LOAD(1, 2, 3) / DT(2, 3) 5

Set temperature difference

Adjustment range: 1.5 ... 50.0 K [3.0 ... 90.0 °Ra]


in steps of 0.5 K [1.0 °Ra]

Factory setting: 10.0 K [20.0 °Ra]



Note

To enable speed control, the corresponding relay has to be set to “Auto” (adjustment channel **MAN**) and the pump control type has to be set to Puls, or ADAP (adjustment channel **PUMP**).

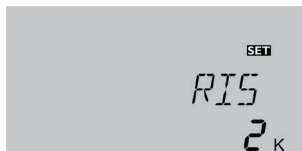

LOAD(1, 2, 3) / RIS(1, 2, 3)

Rise

Adjustment range: 1 ... 20 K [2 ... 40 °Ra]


in steps of 1 K [2 °Ra]

Factory setting: 2 K [4 °Ra]

When the switch-on temperature difference is reached, the pump is activated at 100% speed for 10 s. Then, the speed is reduced to the minimum pump speed value.

If the temperature difference reaches the adjusted nominal value (**DT S**), the pump speed increases by one step (10%). The response of the controller can be adapted via the parameter “Rise”. If the difference increases by the adjustable rise value **RIS**, the pump speed increases by 10% until the maximum pump speed of 100% is reached. If, at decreasing temperatures, the temperature difference decreases by the adjustable rise value **RIS**, the pump speed decreases by 10%.

Maximum tank temperature

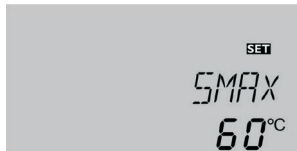

LOAD(1, 2, 3) / S1(2, 3) MAX

Maximum tank temperature

Adjustment range: 4 ... 95 °C [40 ... 200 °F]

in steps of 1 °C [2 °F]

Factory setting: 60 °C [140 °F]

If the tank temperature reaches the adjusted maximum temperature, the tank will no longer be loaded in order to avoid damage caused by overheating. The * symbol is shown on the display if the tank temperature exceeds the maximum value.

The corresponding reference sensor can be chosen, see “Sensor maximum tank temperature”.

Switch-on hysteresis -2 K [4 °Ra]

Sensor maximum tank temperature



LOAD(1, 2) / SMAXS1 (2)

Sensor tank maximum temp.

Adjustment range: 1st tank: S2, S3; 2nd tank: S4, S5

Tank being loaded in layers: S2, S3

Factory setting: 1st tank: S2; 2nd tank: S4

Sensor allocation for the tank maximum limitation. The maximum limitation always refers to the sensor selected.

If e. g. S3 is selected, the differential control will still be carried out using S1 and S2. The temperature at S2 can exceed the adjusted limit temperature, the system will not switch off. If the value at S3 reaches the limit temperature, the system will be switched off.

Loading tank 2 and tank 3



Note

In 3-tank systems, the reference sensor can only be selected for the numerically 1st tank.



LORD2 (3) / LST2 (3)

Loading tank 2, 3


Selection: ON/OFF

Factory setting: ON

In a multi-tank system, the second tank or the third tank can be switched off for loading by means of the parameter LST2 or LST3 respectively.

If the parameter is set to OFF, the system runs like a 2-tank, or a 1-tank system respectively. The representation in the display remains the same.

Pump control

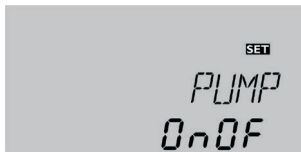

PUMP / PUMP1 (2, 3)

Pump control

Selection: OnOF, Puls, ADAP, PSOL

Factory setting: PSOL (PUMP3: OnOF)

With this parameter, the pump control type can be adjusted. The following types can be selected:

Adjustment for standard pump without speed control:

- OnOF : Pump on/pump off

Adjustment for a standard pump with speed control:

- PULS : Burst control via semiconductor relay

Adjustment for a high-efficiency pump (HE pump) with speed control via adapter:

- PSOL : PWM signal PWM A for R1, PWM B for R2
- ADAP : Pump on/pump off; the corresponding relay (R1 ... 3) remains switched on for one hour after the switch-off condition has been fulfilled.
Speed control can be carried out via an adapter, e. g. the VBus®/PWM interface adapter.



Note


With the factory setting, speed control is not possible.



Note

For more information about connecting HE pumps, see page 35.

Minimum speed

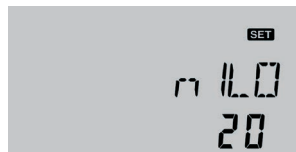

PUMP1 (2, 3) / n1 (2, 3) LO

Speed control

Adjustment range: 30 ... 100%;

20 ... 100% if ADAP and PSOL are adjusted

in steps of 5%

Factory setting: 20% (PUMP3: 30%)


In the adjustment channel **n1(2, 3)LO**, a relative minimum speed for connected pumps can be allocated to the outputs R1, R2 and R3.



Note

When loads which are not speed-controlled (e. g. valves) are used, the value of the corresponding relay (n1, n2, n3) must be set to 100% or the pump control type must be set to OnOF in order to deactivate pump speed control.

Maximum speed

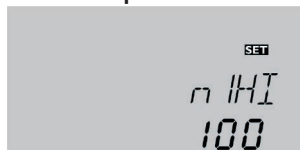

PUMP1 (2, 3) / n1 (2, 3) HI

Speed control

Adjustment range: 30 ... 100%;

20 ... 100% if ADAP and PSOL are adjusted

in steps of 5%

Factory setting: 100%


In the adjustment channel **n1(2, 3)HI**, a relative maximum speed for connected pumps can be allocated to the outputs R1, R2 and R3.



Note

When loads which are not speed-controlled (e. g. valves) are used, the value of the corresponding relay (n1, n2, n3) must be set to 100% or the pump control type must be set to OnOF in order to deactivate pump speed control.

Collector emergency shutdown

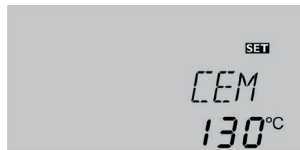

COL (1, 2) / CEM (1, 2)

Collector temperature limitation

Adjustment range: 80 ... 200 °C [170 ... 390 °F]


in steps of 1 °C [2 °F]

Factory setting: 130 °C [270 °F]

Switch-on hysteresis: -10.0 K [20.0 °Ra]

When the collector temperature exceeds the adjusted collector emergency temperature (**CEM/CEM1/CEM2**), the solar pump (R1/R2) is switched off in order to protect the system components against overheating (collector emergency shutdown). If the maximum collector temperature is exceeded, Δ is displayed (flashing).

Collector cooling

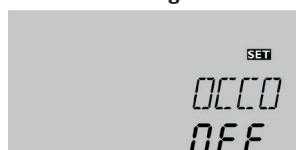

COL (1, 2) / OCCO (1, 2)

Selection: OFF / ON

Factory setting: OFF

This function is used for keeping the system temperatures and consequently the thermal load as low as possible.

When the tank temperature exceeds the adjusted maximum tank temperature, the solar system is switched off. If the collector temperature increases to the adjusted maximum collector temperature, the solar pump is activated until the collector temperature falls below the maximum collector temperature. The tank temperature may then exceed the maximum temperature, but only up to 95 °C (emergency shutdown of the tank).

If the collector cooling is active, \star is displayed (flashing).



COL (1, 2) / OCCO (1, 2) / CMAX (1, 2)

Collector maximum temp.

Adjustment range: 70 ... 160 °C [150 ... 320 °F]

in steps of 1 °C [2 °F]

Factory setting: 110 °C [230 °F]


Switch-on hysteresis: -5 K [-10 °Ra]



Note

This function is only available, if the system cooling function and the heat dissipation function are deactivated.

Minimum collector limitation

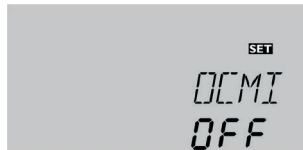

COL(1,2) / DCMI(1,2)

Collector minimum temp.

Selection: ON/OFF

Factory setting: OFF



COL(1,2) / DCMI(1,2) / CMIN(1,2)

Collector minimum temp.

Adjustment range: 10 ... 90 °C [50.0 ... 190.0 °F]

in steps of 0.5 °C [1.0 °F]

Factory setting: 10.0 °C [50.0 °F]

The minimum collector temperature is the minimum switch-on temperature which must be exceeded for the solar pump (R1/R2/R3) to switch on. The minimum temperature prevents the pump from being switched on too often at low collector temperatures. If the collector temperature falls below the adjusted minimum temperature, ❄️ is displayed (flashing).

Evacuated tube collector function




COL / OTCO(1, 2)

Evacuated tube collector function

Selection: ON/OFF

Factory setting: OFF

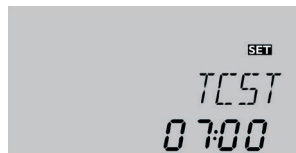


COL / OTCO(1, 2) / TCST(1, 2)

Starting time

Adjustment range: 00:00 ... 23:00

in steps of 01:00

Factory setting: 07:00

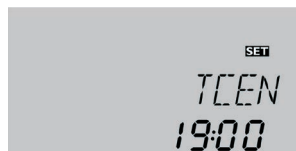

COL / OTCO(1, 2) / TCEN(1, 2)

Ending time

Adjustment range: 00:30 ... 23:30

in steps of 00:30

Factory setting: 19:00




COL / OTCO(1, 2) / TCRU(1, 2)

Runtime

Adjustment range: 30 ... 500 s

in steps of 5 s

Factory setting: 30 s

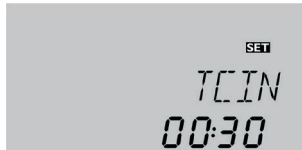

COL / OTCO (1, 2) / TCIN (1, 2)

Standstill interval

Adjustment range: 5 ... 60 min

in steps of 00:01

Factory setting: 30 min

This function helps overcome the non-ideal sensor position with some tube collectors.

This function operates within an adjusted time frame, beginning at **TCST** and ending at **TCEN**. It activates the collector circuit pump for an adjustable runtime (**TCRU**) between adjustable standstill intervals (**TCIN**) in order to compensate for the delayed temperature measurement.

If the runtime **TCRU** is set to more than 10 s, the pump will be run at 100% for the first 10 s of the runtime. For the remaining runtime, the pump will be run at the adjusted minimum speed **nLO**.

If the collector sensor is defective or the collector is blocked, this function is suppressed or switched off.

2-collector systems

In 2-collector systems, the evacuated tube collector function is available for each collector field (**OTCO2**).

If one of the collector fields is being loaded, the heat transfer fluid flows through the inactive field and only the corresponding relay is energized.

Multi-tank systems

If the evacuated tube collector function is activated, the speed of the solar pump will decrease to the minimum speed **nLO** during the loading break time. The solar loading of the subordinate tank will continue.

In 2-collector systems, the collector field which has been active before the loading break time remains active during the loading break time, unless the evacuated tube collector function of the inactive field becomes active.

Antifreeze function



COL (1) / DCFR

Antifreeze function

Selection: ON / OFF

Factory setting: OFF



COL (1) / DCFR / CFR 0

Antifreeze temperature on

Adjustment range: -40.0 ... +9.0°C [-39.0 ... +48.0°F]

in steps of 0.5°C [1.0°F]

Factory setting: 4.0°C [40.0°F]



COL (1) / DCFR / CFR F

Antifreeze temperature off

Adjustment range: -39.0 ... +8.0°C [-39.0 ... +48.0°F]

in steps of 0.5°C [1.0°F]

Factory setting: 5.0°C [42.0°F]



COL (1) / OCFR / FRPST

Tank sensor selection

(in 2- and 3-tank systems only)

Selection: 1, 2, 3

Factory setting: 1

The antifreeze function activates the loading circuit between the collector and the tank when the collector temperature falls below the adjusted temperature **CFR O**. This will protect the fluid against freezing or coagulating. If **CFR F** is exceeded, the solar pump will be switched off again. The antifreeze function will be suppressed if the tank temperature of the selected tank falls below 5.0 °C [42.0 °F]. In 2-tank systems, the function will in this case be switched to the 2nd tank. In a system with tank loading in layers it will be switched to the upper tank zone. If the temperature of the 2nd or 3rd tank (or of the upper tank zone respectively) also falls below 5.0 °C [42.0 °F], the system will be switched off.



Note

This function can only become active if the tank temperature is higher than the collector temperature.



Note

Since this function uses the limited heat quantity of the tank, the antifreeze function should be used in regions with few days of temperatures around the freezing point.

Priority logic



LLOGI / LOGIC

Priority logic

Selection: Prio, SuLA, StUF, PAr, bLO

Factory setting: PRIO



LLOGI / PRIO1 (2, 3)

Priority

Adjustment range: 1, 2, 3

Factory setting: 1



LLOGI / TLB

Loading break time

Adjustment range: 1 ... 30 min
in steps of 1 min

Factory setting: 2 min



LLOGI / TRUN

Oscillating loading runtime

Adjustment range: 1 ... 30 min
in steps of 1 min

Factory setting: 15 min

Priority logic can be used in 2-tank systems, 3-tank systems or systems with tank loading in layers and determines how the heat is divided between the tanks. Different types of priority logic are adjustable:

1. Tank sequence control (PRIO)
2. Successive loading (SuLA)
3. Progressive loading (StUF)
4. Parallel loading (PAr)
5. Loading in blocks (bLO)

1. In tank sequence control (PRIO), a priority (1 = highest priority) is assigned to the tank (PRIO1 = tank 1, PRIO2 = tank 2; the priority of the 3rd tank is determined by the priority of the first 2 tanks).

The priority tank will be loaded if its switch-on conditions are fulfilled and if it is not blocked. If the priority tank is not blocked but its switch-on conditions are not fulfilled, the tank sequence control starts provided that the switch-on conditions of the subordinate tank are fulfilled. If a subordinate tank can be loaded, it will be loaded for the oscillating loading time tRUN. After the loading time has ended, the pump is switched off for the adjustable loading break tLB. If during this time the priority tank can be loaded, it will be loaded. If the priority tank has reached its maximum temperature, the subordinate tank next in priority will be loaded. If the switch-on conditions for the first subordinate tank are not fulfilled, but the switch-on conditions for the last subordinate tank are fulfilled, the tank sequence control will start working on both subordinate tanks. If the first subordinate tank has also reached its maximum temperature, the last subordinate tank will be loaded up to its maximum temperature, if possible, without tank sequence control.

2. In successive loading (SuLA), the priority tank will be loaded up to its maximum temperature first. Only when the priority tank is fully loaded, will the subordinate tank(s) next in priority be loaded.

3. In progressive loading (StUF), the tank with the lowest temperature is loaded first. As soon as the temperature of the tank being loaded exceeds the temperature of the next tank by 5 K, loading switches to the cooler tank. If the temperature of that tank is by 5 K higher than the temperature of the third tank, loading switches to the third tank. From then on, progressive loading will continue in a loop, as long as there is a sufficient temperature difference between the tank being loaded and the collector.

4. In parallel loading (PAr), all tanks with a sufficient temperature difference to the collector are loaded in parallel up to their maximum temperatures.

This option is only available if each tank has its own pump (ARR = 3, 4, 6).



LLOGI/LOGIC/BLO1 (2)

Loading in blocks

Selection:


PRIO, SuLA, StUF

Factory setting: PRIO


5. In systems with 3 tanks or 2 tanks and tank loading in layers, **bLO** loading is possible. This means that 2 tanks are combined to one. The **PRIO1 ... 3** adjustment determines the loading priority and which tanks are being combined. Tanks with the same PRIO adjustment are combined. This common value is used as the loading priority of the combined tank.

In the channel **BLO1**, the loading type of the combined tank, in relation to the single remaining tank, can be adjusted.

In the channel **BLO2**, the loading type of the two individual tanks of the combined tank can be adjusted.

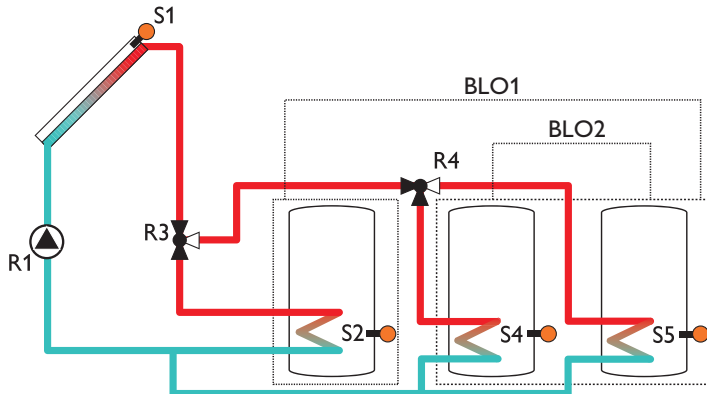

Tank set option

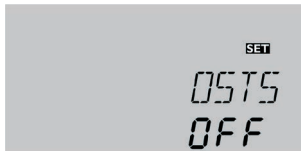


LLOGI/0ST5

Tank set option

Selection: ON/OFF

Factory setting: OFF

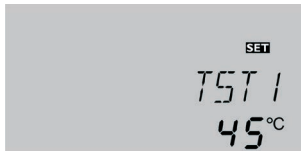


LLOGI/TST1

Set temperature tank 1

Adjustment range: 4... 85 °C [38... 184 °F]

in steps of 1 °C [2 °F]

Factory setting: 45 °C [120 °F]

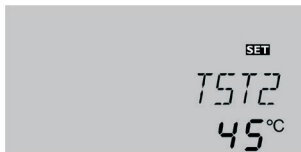

LLOGI/TST2

Set temperature tank 2

Adjustment range: 4... 85 °C [38... 184 °F]

in steps of 1 °C [2 °F]

Factory setting: 45 °C [120 °F]



LLOGI/TST3

Set temperature tank 3

Adjustment range: 4... 85 °C [38... 184 °F]

in steps of 1 °C [2 °F]

Factory setting: 45 °C [120 °F]


Additionally, the following options can be activated:

Tank set option OSTs: With this function, a set temperature can be adjusted for each tank.

If the selected priority tank reaches its set temperature, the subordinate tanks will be loaded successively up to their set temperatures. After that, the priority tank is loaded up to its maximum temperature, then tank 2 and then tank 3.

Spreaded loading option

(only in ARR 3, 4, 6 with differing priority)

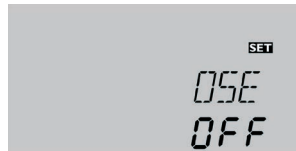

LLOGI/PRI0/0SE

Spreaded loading option

Selection: ON/OFF

Factory setting: OFF


Spreaded loading option 0SE: In 2- and 3-tank systems with 2 or 3 pumps, a spreaded loading option can be activated:

As soon as the adjustable spread difference **DTSE** between the collector and the reference tank is reached, the absorption tank will be loaded in parallel unless it is blocked. If the temperature difference falls by 2K [4 °Ra] below **DTSE**, the absorption tank will no longer be loaded.




LLOGI/PRIO/DTSE

Temperature diff. spreaded loading
Adjustment range: 20 ... 90 K [40 ... 160 °Ra]
in steps of 1 K [2 °Ra]
Factory setting: 40 K [70 °Ra]

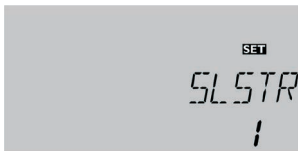

LLOGI/PRIO/SLSTR

Reference tank
Adjustment range: 1, 2, 3
Factory setting: 1

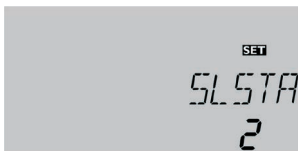

LLOGI/PRIO/SLSTR

Absorption tank
Adjustment range: 1, 2, 3
Factory setting: 2



Note


If the tank set option is activated along with the spreaded loading function, the spreaded loading function will only be active until the set temperature of the selected tank is reached.



Note

The absorption tank can only be selected in 3-tank systems with 3 pumps.


Pause control

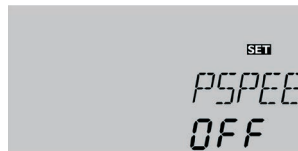

LLOGI/PSPEE

Pause speed
Selection: ON/OFF
Factory setting: OFF

If the pause speed is activated, the relay of the tank which has been loaded last remains switched on during the loading break time. Speed is determined by the value adjusted in **nLO**.

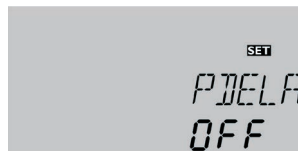

LLOGI/PDELA

Pump delay
Selection: ON/OFF
Factory setting: OFF

This function takes into account the actuation times of valves and switches on the pump with a delay.

If the pump delay is activated, the corresponding relay for the valve will be energized first. The pump(s) will be activated with the delay time (200s).



Note

In systems with pump logic, the parameter **PDELA** is not available.

Cooling functions


Different cooling functions can be activated: system cooling, tank cooling and heat dump.



Note

If the temperature at the tank sensor reaches 95 °C, all cooling functions will be blocked. The switch-on hysteresis is -2 K [4 °Ra].

System cooling

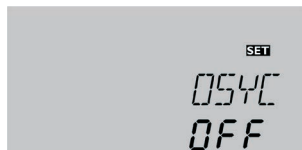

COOL/DSYC

System cooling option


Adjustment range: OFF/ON

Factory setting: OFF



Note

This function will only be available if the collector cooling function and the heat dissipation function are deactivated.

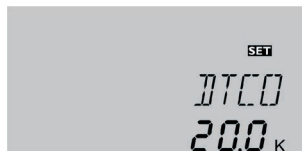

COOL/DTCO

Switch-on temperature diff.

Adjustment range: 1.0 ... 30.0 K [2.0 ... 60.0 °Ra]

in steps of 0.5 K [1.0 °Ra]

Factory setting: 20.0 K [40.0 °Ra]



COOL/DTCF

Switch-off temperature diff.

Adjustment range: 0.5 ... 29.5 K [1.0 ... 59.0 °Ra]

in steps of 0.5 K [1.0 °Ra]


Factory setting: 15.0 K [30.0 °Ra]

The system cooling function aims to keep the solar system operational for a longer time. The function overrides the maximum tank temperature to provide thermal relief of the collector field and the heat transfer fluid on hot days.

If the tank temperature is higher than the adjusted maximum tank temperature and the switch-on temperature difference DTCO is reached, the solar system remains activated or is switched on. Solar loading is continued until either the temperature difference falls below the adjusted value **DTCF** or the collector emergency shutdown temperature CEM is reached.

If the system cooling function is active, ☀ is shown on the display (flashing).

Tank cooling

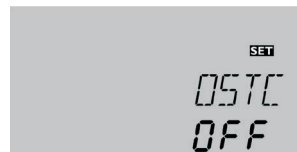

COOL/DSTC

Tank cooling option

Selection: OFF/ON

Factory setting: OFF

When the tank cooling function is activated, the controller aims to cool down the tank during the night in order to prepare it for solar loading on the following day.

If the adjusted maximum tank temperature (**S1MAX/S2MAX/S3MAX**) is exceeded and the collector temperature falls below the tank temperature, the system will be reactivated in order to cool down the tank.

Reference temperature differences are **DT1 (2, 3) O** and **DT1 (2, 3) F**.

Heat dump



COOL/OHDP

Heat dump

Selection: ON/OFF

Factory setting: OFF




COOL/OTCL

Overtemperature collector

Adjustment range: 70 ... 160 °C [150 ... 320 °F]

in steps of 1 °C [2 °F]

Factory setting: 110 °C [230 °F]

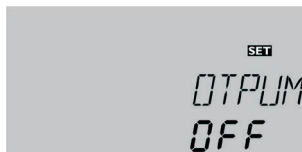

COOL/OTPUM

Pump or valve logic

Selection: ON/OFF

Factory setting: OFF



COOL/HOREL

Heat dump relay

Selection: system dependent

Factory setting: 3/4

If the heat dissipation function **OHDP** is activated, the selected relay is energized with 100%, if the collector temperature reaches the adjusted collector overtemperature **OTCL**. If the collector temperature falls by 5 K [10 °Ra] below the adjusted collector overtemperature **OTCL**, the relay will be switched off.

A selection can be made between pump logic and valve logic (**OTPUM ON** = pump logic, **OTPUM OFF** = valve logic). If pump logic is selected, the relay for solar loading switches off and the relay for heat dump remains switched on.


The relay for the heat dissipation function can be selected in the **HOREL** channel.



Note

The adjustable value **OTCL** is locked against the collector emergency temperature **CEM** by 10.0 K [20.0 °Ra]. The heat dissipation function will only be available if the collector cooling function and the system cooling function are deactivated.

Heat exchange function

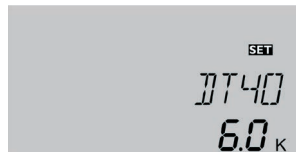


DT4/DT40

Switch-on temperature diff.

Adjustment range: 1.0 ... 30.0 K [2.0 ... 60.0 °Ra]

in steps of 0.5 K [1.0 °Ra]

Factory setting: 6.0 K [12.0 °Ra]

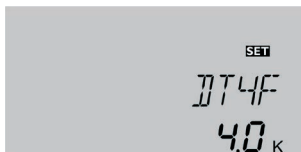


DT4/DT4F

Switch-off temperature diff.

Adjustment range: 0.5 ... 29.5 K [1.0 ... 59.0 °Ra]

in steps of 0.5 K [1.0 °Ra]

Factory setting: 4.0 K [8.0 °Ra]

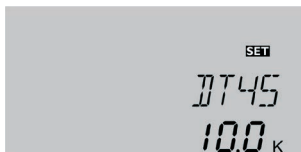


DT4/DT4S

Set temperature difference

Adjustment range: 1.5 ... 50.0 K [3.0 ... 90.0 °Ra]

in steps of 0.5 K [1.0 °Ra]

Factory setting: 10.0 K [20.0 °Ra]

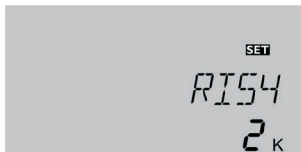

DT4/RIS4

Rise

Adjustment range: 1 ... 20 K [2 ... 40 °Ra]

in steps of 1 K [2 °Ra]

Factory setting: 2 K [4 °Ra]

The heat exchange function is used for transporting heat from tank 2 to tank 1.

The reference sensor (heat source) for the heat exchange function for tank 2 is sensor S5 (TST2T). The reference sensor (heat sink) for tank 1 (TST1T) is S3. It is used as a reference sensor for the differential function and for the maximum limitation.

Additionally, minimum and maximum temperature limitations and the corresponding switch-on and switch-off differences can be set for the independent temperature differential control. Both switch-on and switch-off temperature differences **DT4O** and **DT4F** as well as the set temperature difference **DT4S** and rise **RIS4** are valid.



Note

The heat exchange function is available in system 2 and 4 only.

Maximum temperature limitation for the heat exchange



DT4/MAX4O

Switch-on temperature

Adjustment range: 0.5 ... 95.0 °C [31.0 ... 200.0 °F]

in steps of 0.5 °C [1.0 °F]

Factory setting: 60.0 °C [140.0 °F]



DT4/MAX4F

Switch-off temperature


Adjustment range: 0.0 ... 94.5 °C [30.0 ... 199.0 °F]

in steps of 0.5 °C [1.0 °F]

Factory setting: 58.0 °C [136.0 °F]

If the adjusted value **MAX4O** is exceeded, the relay will be switched off. If the temperature falls below the adjusted value **MAX4F**, the relay will be energized.

Minimum temperature limitation for the heat exchange

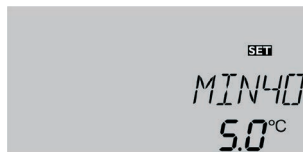

DT4/MIN40

Switch-on temperature

Adjustment range: 0.0 ... 94.5 °C [30.0 ... 199.0 °F]

in steps of 0.5 °C [1.0 °F]

Factory setting: 5.0 °C [42.0 °F]



DT4/MIN4F

Switch-off temperature


Adjustment range: 0.5 ... 95.0 °C [31.0 ... 200.0 °F]

in steps of 0.5 °C [1.0 °F]

Factory setting: 10.0 °C [50.0 °F]

If the temperature falls below the adjusted value **MIN40**, the relay will be switched off. If the adjusted value **MIN4F** is exceeded, the relay will be energized.

ΔT function

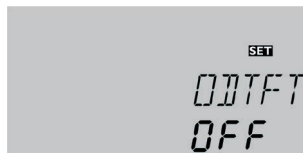

DTFT

ΔT function

Selection: ON/OFF

Factory setting: OFF

The optional ΔT function uses the sensors S3 (heat source) and S5 (heat sink) to switch the adjustable relay.



Note

The optional ΔT function is available in system 1 and 3 only.



DTFT/DT40

Switch-on difference

Adjustment range: 1.0 ... 50.0 K [2.0 ... 90.0 °Ra]

in steps of 0.5 K [1.0 °Ra]

Factory setting: 6.0 K [12.0 °Ra]



DTFT/DT4F

Switch-off difference

Adjustment range: 0.5 ... 49.5 K [1.0 ... 89.0 °Ra]

in steps of 0.5 K [1.0 °Ra]

Factory setting: 4.0 K [8.0 °Ra]

The switch-on and switch-off differences **DT40** and **DT4F** are valid for this function.

Minimum limitation for the ΔT function




DT4/TH10

Switch-on temperature

Adjustment range: 0.0 ... 95.0 °C [30.0 ... 200.0 °F]

in steps of 0.5 °C [1.0 °F]

Factory setting: 65.0 °C [150.0 °F]

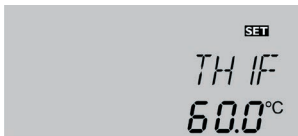

DT4/TH1F

Switch-off temperature


Adjustment range: 0.0 ... 95.0 °C [30.0 ... 200.0 °F]

in steps of 0.5 °C [1.0 °F]

Factory setting: 60.0 °C [140.0 °F]

If the adjusted value **TH1O** is exceeded, the relay will be switched on. If the temperature falls below the adjusted value **TH1F**, the relay will be switched off.

Maximum limitation for the ΔT function

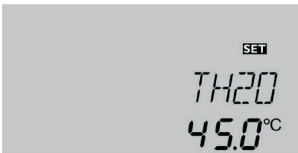


DT4/TH2O

Switch-on temperature

Adjustment range: 0.0 ... 95.0 °C [30.0 ... 200.0 °F]

in steps of 0.5 °C [1.0 °F]

Factory setting: 45.0 °C [120.0 °F]

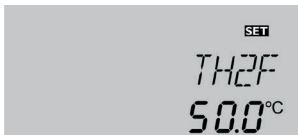

DT4/TH2F

Switch-off temperature

Adjustment range: 0.0 ... 95.0 °C [30.0 ... 200.0 °F]

in steps of 0.5 °C [1.0 °F]

Factory setting: 50.0 °C [125.0 °F]

If the temperature falls below the adjusted value **TH2O**, the relay will be switched on. If the temperature exceeds the adjusted value **TH2F**, the relay will be switched off.



ODTFT/DTREL

Relay

Selection: System 1: R2, R4


System 3: R3, R4

Factory setting: 4


The relay for the ΔT function can be selected.

Freely adjustable thermostat function

Backup heating

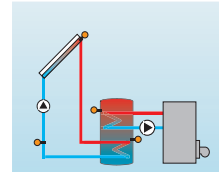

Use of surplus energy

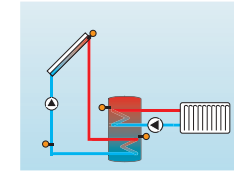


The thermostat function works independently from the solar operation and can be used for using surplus energy or for backup heating.

- **AH O < AH F**

thermostat function for backup heating

- **AH O > AH F**

thermostat function for using surplus energy

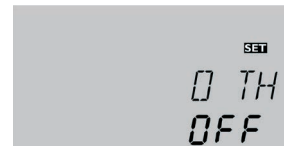


DTH

Thermostat function

Adjustment range: ON/OFF

Factory setting: OFF

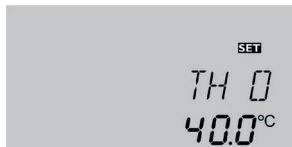


OTH/TH 0

Thermostat switch-on temp.

Adjustment range: 0.0 ... 250.0 °C [30 ... 480 °F]

in steps of 0.5 °C [1.0 °F]

Factory setting: 40.0 °C [110.0 °F]

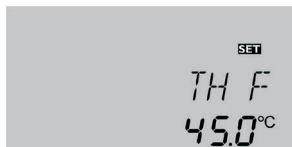


OTH/TH F

Thermostat switch-off temp.

Adjustment range: 0.0 ... 250.0 °C [30 ... 480 °F]

in steps of 0.5 °C [1.0 °F]

Factory setting: 45.0 °C [110.0 °F]

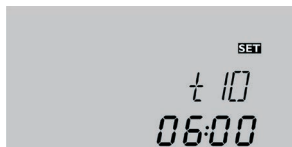

OTH/T10

Switch-on time 1

Adjustment range: 00:00 ... 23:45

Factory setting: 06:00


in steps of 15 min

In order to block the thermostat function for a certain period, there are three time frames t1 ... t3. The switch-on and switch-off times can be adjusted in steps of 15 minutes. If the switch-on and the switch-off times are identical, the time frame is inactive.

If the thermostat function should run from 06:00 a.m. and 09:00 a.m. only, adjust t10 to 06:00 a.m. and t1F to 09:00 a.m.

The first time frame is factory set from 06:00 to 22:00.

If the switch-on and switch-off times of a frame are set to an identical value, the time frame is inactive. If all time frames are set to 00:00, the thermostat function is solely temperature dependent.

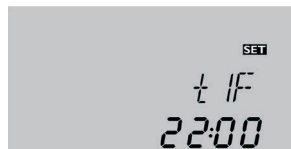


OTH/T1F

Switch-off time 1

Adjustment range: 00:00 ... 23:45

Factory setting: 22:00

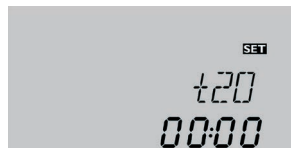


OTH/T2 (3) 0

Switch-on time 2 (3)

Adjustment range: 00:00 ... 23:45

Factory setting: 00:00

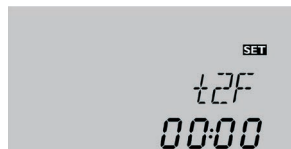


OTH/T2 (3) F

Switch-off time 2 (3)

Adjustment range: 00:00 ... 23:45

Factory setting: 00:00

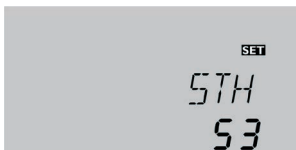

OTH/STH

Thermostatic backup heating sensor

Selection: S3, S5

Factory setting: S3/S5

Depending on the system selected, the sensor for the thermostatic backup heating can either be selected or is pre-set.



OTH/RTH


Thermostatic backup heating relay

Selection:

Factory setting: R3

Depending on the system selected, the relay for the thermostatic backup heating can either be selected or is pre-set.


Manual mode

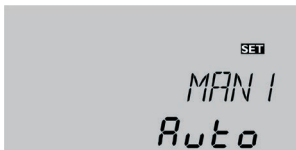

MAN/MAN1 (2, 3):

Adjustment range: Auto, ON, OFF, nLO, nHI

Factory setting: Auto

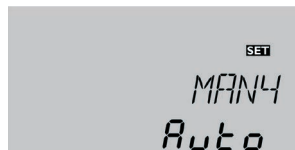

MAN/MAN4

Adjustment range: Auto, ON, OFF

Factory setting: Auto

For control and service work, the operating mode of the controller can be manually adjusted. For this purpose, select the adjustment value **MAN**. The following adjustments can be carried out:

Auto : relay in automatic mode

ON : relay is switched on

OFF : relay is switched off

nLO : relay is switched with adjusted minimum speed

nHI : relay is switched with adjusted maximum speed

The controller is equipped with a shortcut that enables a quick access to the MAN menu (manual mode).


➔ In order to access the MAN menu, press buttons ⑥ and ⑦ at the same time, then press button ②.



Note

Always adjust the operating mode back to “Auto” when the control and service work is completed. Otherwise normal operation will not be possible.

Blocking protection

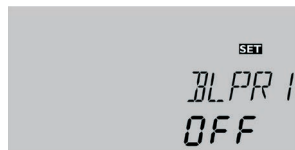


BLPR1(2, 3)

Adjustment range: ON/OFF

Factory setting: ON

In order to protect the pumps against blocking after standstill, the controller is equipped with a blocking protection function. This function switches on the relays one after another every day at 12:00 a.m. for 10 s at 100%.

Option: Thermal disinfection (OTDIS)

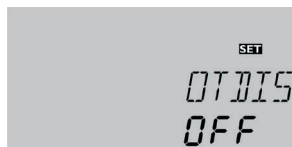

OTDIS


Thermal disinfection function

Adjustment range: ON/OFF

Factory setting: OFF

This function helps to contain the spread of Legionella in the upper DHW tank zone by systematically activating the backup heating.

Reference sensor for the thermal disinfection is the numerically first free sensor! Reference relay is the numerically first free relay!

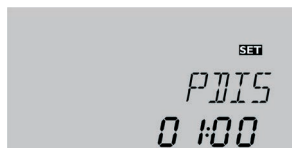


OTDES/PDIS

Monitoring period

Adjustment range: 0 ... 30:0 ... 24 (dd:hh)

Factory setting: 01:00

For thermal disinfection, the temperature in the upper DHW tank zone has to be monitored. This protection is ensured when, during the monitoring period, the disinfection temperature is continuously exceeded for the entire disinfection period.

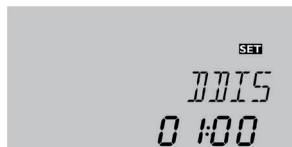


OTDIS/DDIS

Disinfection period

Adjustment range: 00:00 ... 23:59

Factory setting: 01:00

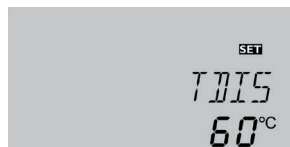

OTDIS/TDIS

Disinfection temperature

Adjustment range: 0 ... 95 °C [30 ... 200 °F]

in steps of 1 °C [2 °F]

Factory setting: 60 °C [140 °F]

If the thermal disinfection function is activated, the monitoring period starts as soon as the temperature at the reference sensor falls below the disinfection temperature. When the monitoring period ends, the reference relay activates the backup heating. The disinfection period starts to count as soon as the temperature at the allocated sensor exceeds the disinfection temperature.

If the temperature at the reference sensor exceeds the disinfection temperature by more than 5 K, the reference relay switches off until the temperature has fallen below a value of 2 K above the disinfection temperature.

Thermal disinfection can only be completed when the disinfection temperature is exceeded for the duration of the disinfection period without interruption.

If the disinfection conditions have been fulfilled by solar loading before the monitoring period ends, thermal disinfection is considered complete and a new monitoring period begins.




Note

If the thermal disinfection option OTDIS is activated, the display channels TDIS and CDIS will be displayed. TDIS will be displayed regardless of the temperature measured at the reference sensor.

Due to the flexible control logic, the exact time of thermal disinfection is not predictable. In order to set a fixed time for the disinfection, the starting delay can be used.

Thermal disinfection with starting delay

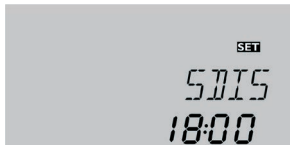

OTDIS / SDIS

Starting time

Adjustment range: 0:00 ... 24:00

Factory setting: 00:00

full hours only

When a starting time for thermal disinfection with starting delay is adjusted, back-up heating activation will be delayed until that time, even after the monitoring period has ended.

If the monitoring period ends, for example, at 12:00 o'clock, and the starting time has been set to 18:00, the reference relay will be energized with a delay of 6 hours at 18:00 instead of 12:00 o'clock.

If, before the delay time has elapsed, the disinfection conditions are fulfilled by solar loading, thermal disinfection is considered complete and a new monitoring period begins.

If the starting time is adjusted to 00:00 (factory setting), the delay function is inactive.

When thermal disinfection is activated, different display channels appear depending on the current status of the function (see also p. 43):

CDIS - countdown of the monitoring period

DDIS - countdown of the disinfection period

TDIS - substitutes TSTT during the disinfection period

SDIS - displays the adjusted starting time (flashing) during the delay time after the monitoring period has ended




OTDIS / TSDIS

Sensor thermal disinfection

Adjustment range: 2,3,4,5

Factory setting: system dependent

For this function, free sensors at an appropriate position can be selected.

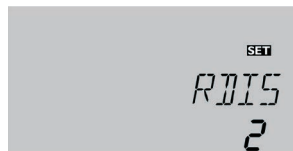

OTDIS / RDIS

Relay thermal disinfection

Adjustment range: 2, 3, 4

Factory setting: system dependent

The relay for the thermal disinfection function can be selected.

Parallel relay



OPARR / PARRE

Parallel relay

Adjustment range 2, 3, 4

Factory setting: 2



With this function, e. g. a valve can be controlled in parallel to the pump via a separate relay **PARRE**.


If solar loading takes place (R1 and/or R2) or if a solar function is active, the relay selected will be energized. The parallel relay can also be energized inversely (**INVER**).



Note

If R1 and/or R2 are in the manual mode, the selected parallel relay will not be energized.

Energy metering

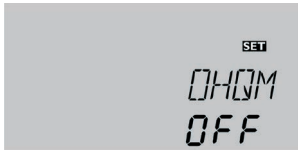

OHQM

Energy metering

Adjustment range: OFF/ON

Factory setting: OFF



OHQM/FTYPE

Flow rate detection type

Selection: 1,2

Factory setting: 1

The energy metering can be carried out in 2 different ways (see below): without flowmeter (using a fixed flow rate value) or with a V40 flowmeter.

- Enable the energy metering option in the channel OHQM.
- Select the type of flow rate detection in the channel FTYPE.

Flow rate detection type:

1 : fixed flow rate value

2 : V40



OHQM/FMAX

Flow rate in l/min

Adjustment range: 0.5 ... 100.0
in steps of 0.1

Factory setting: 6.0



OHQM/MEDT

Heat transfer fluid

Adjustment range: 0 ... 3

Factory setting: 3

Energy metering with fixed flow rate value

The energy metering calculation (estimation) uses the difference between the flow and return temperatures and the entered flow rate (at 100% pump speed).

- Adjust 1 in the channel FTYPE.
- Read the flow rate (l/min) and adjust it in the channel FMAX.
- Adjust the antifreeze type and concentration of the heat transfer fluid in the channels MEDT and MED%.



Note

FMAX cannot be selected in systems with 2 solar pumps (ARR 3, 4, 6, 8, 9).



Note

The energy metering calculation (estimation) uses the difference between the flow and return temperatures and a flow rate value calculated from the entered flow rate (at 100% pump speed) and the current pump speed.



OHQM / MED%

Antifreeze concentration in vol. %

(MED% is "hidden" when MEDT 0 or 3 is used)

Adjustment range: 20 ... 70%

in steps of 1 %

Factory setting: 45%

Antifreeze type:

- 0 : water
- 1 : propylene glycol
- 2 : ethylene glycol
- 3 : Tyfocor® LS/G-LS



OHQM / FIMP

Pulse rate

Adjustment range: 0.5 ... 99.0

in steps of 0.1

Factory setting: 1.0

Energy metering with V40 flowmeter

The energy metering calculation uses the difference between the flow and return temperatures and the volume flow transmitted by the flowmeter.

→ Adjust 2 in the channel FTYPE

→ In the channel FIMP, adjust the impulse rate corresponding to the V40 flowmeter used.

→ Adjust the antifreeze type and concentration of the heat transfer fluid in the channels MEDT and MED%.

HQM sensors



OHQM / SFHQM

Flow sensor

Adjustment range: 1, 3, 5

Factory setting: 1



OHQM / SRHQM

Return sensor

Adjustment range: 2, 3, 5


Factory setting: 2

For this function, free sensors at an appropriate position can be selected as flow and return sensors.

→ In the channel SFHQM, select the flow sensor.

→ In the channel SRHQM, select the return sensor.

Time and date

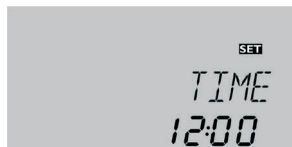


DATE/TIME

Time

Adjustment range: 00:00 ... 23:59

Factory setting: 12:00

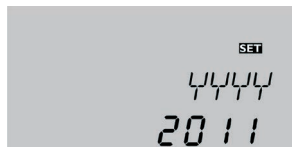

DATE/YYYY

Year

Adjustment range: 2010 ... 2099

Factory setting: 2010



DATE/MM

Month

Adjustment range: 01 ... 12

Factory setting: 03



DATE/DD


Day

Adjustment range: 01 ... 31

Factory setting: 15

The date and time can be entered. Both are required for the thermostat function.

ROSA

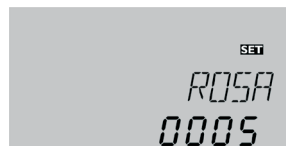

ROSA

ROSA numbers

Adjustment range: 0000 ... 9999

In the ROSA channel, the 4-digit number given by the RESOL Online Service Assistant can be entered.

The following table shows the numbers available for the BX L with the corresponding system layouts.

| System | ROSA number |
|--------|-------------|
| ARR1 | 5 |
| ARR2 | 16 |
| ARR3 | 6 |
| ARR4 | 17 |
| ARR5 | 225 |
| ARR6 | 226 |
| ARR7 | 227 |
| ARR8 | 29 |
| ARR9 | 228 |



Note

Because of the increasing size of the data packets, the remaining logging time does not decrease linearly. The data packet size can increase, e. g. with the increasing operating hours value.

Valve logic




VLOG

Valve logic

Adjustment range: 1, 2, 3, 4

Factory setting: 1

In this adjustment channel the valve logic can be adjusted.

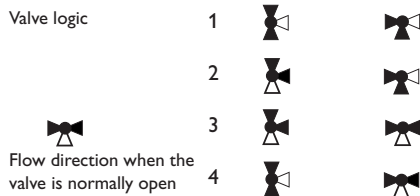

Temperature unit



UNIT

Temperature unit


Adjustment range: °C, °F

Factory setting: °C

In this adjustment channel the temperature unit can be chosen.

The unit can be switched between °C and °F during operation.

Language

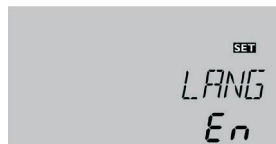

LANG

Language

Adjustment range: dE, En, ES, Fr

Factory setting: En

In this adjustment channel, the menu language can be chosen.

- dE : German
- En : English
- ES : Spanish
- Fr : French

SD card

If an SD card is used, **COM** is shown on the display. If the SD card is full, **COM** is flashing.



OSDC

SD card

Selection: ON/OFF


Factory setting: OFF

Starting the logging

➔ Insert the SD card into the slot

Logging will start immediately.

➔ Adjust the desired logging interval LOGI

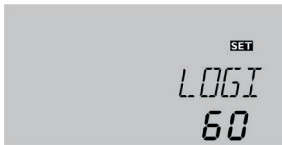


OSDC/LOGI

Logging interval

Adjustment range: 1 ... 1200 s

Factory setting: 60 s

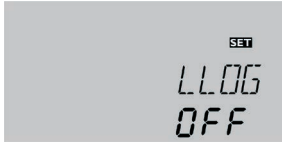

OSDC/LLOG


Linear logging

Selection: ON/OFF

Factory setting: OFF

When **LLOG** is activated, data logging will stop if the capacity limit is reached. The message **CFULL** will be displayed.

When LLOG (linear logging) is deactivated, the oldest data logged onto the SD card will be overwritten as soon as the capacity limit is reached.

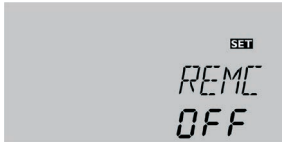

OSDC/REMC

Safely remove card

Adjustment range: ON/OFF

Factory setting: OFF

Completing the logging process

→ Select the menu item **REMC**

→ After **-REM** is displayed remove the card from the slot



OSDC/FORM

Format card

Formatting the SD card

→ Select the menu item **FORM**

→ During the formatting process, **--FORM** will be displayed.

The content of the card will be deleted and the card will be formatted with the FAT 16 file system.

| Messages possible | Description |
|-------------------|--------------------------------|
| FSYS | File system error |
| CTYP | Card type is not supported |
| WRIT | Error during writing |
| NOCRD | No card in slot |
| LOGG | Logging is possible |
| WRITP | Card is write-protected |
| CFULL | Card full |
| RTIME | Remaining logging time in days |
| REMC | Safely remove card command |
| -REM | Card is being removed |
| FORM | Formatting SD card command |
| -FORM | Formatting in progress |
| LOGI | Logging interval in seconds |
| LLOG | Linear logging |

6.3 Overview of options and their parameters

In the following, the additional options and parameters are listed.

The options and parameters displayed depend on the system as well as on the options and functions which have been selected. Some of the options and parameters will only be displayed, if they are available with the individual adjustments.

| Channels | | | | | | |
|----------|---------------|---------------|--------------------|-----------|--|------|
| Channel | Sub channel 1 | Sub channel 2 | Factory setting | Change to | Description | Page |
| COOL > | | | | | Cooling functions | |
| | OSYC* | | OFF | | System cooling | 55 |
| | DTCO | | 20 K [40 °Ra] | | Switch-on difference system cooling | 55 |
| | DTCF | | 15 K [30 °Ra] | | Switch-off difference system cooling | 55 |
| | OSTC | | OFF | | Tank cooling | 55 |
| | OHDP* | | OFF | | Heat dump | 56 |
| | OTCL | | 110 °C [230 °F] | | Overtemperature collector | 56 |
| | OTPUM | | OFF | | Pump or valve logic | 56 |
| ODTFT > | | | | | ΔT function option | 58 |
| | DT4O | | 6.0 K [12.0 °Ra] | | ΔT function switch-on difference | 58 |
| | DT4F | | 4.0 K [8.0 °Ra] | | ΔT function switch-off difference | 58 |
| | RIS4 | | 2 K [4 °Ra] | | ΔT function rise | 59 |
| | TH1O | | 65.0 °C [150.0 °F] | | Thermostat function 1 switch-on temperature | 59 |
| | TH1F | | 60.0 °C [140.0 °F] | | Thermostat function 1 switch-off temperature | 59 |
| | TH2O | | 45.0 °C [120.0 °F] | | Thermostat function 2 switch-on temperature | 59 |
| | TH2F | | 50.0 °C [125.0 °F] | | Thermostat function 2 switch-off temperature | 59 |
| | DREL | | 4 | | ΔT function relay | 59 |
| OTH > | | | | | Thermostat function option | |
| | THNHE | | 40 °C [110 °F] | | Thermostatic backup heating switch-on temperature | 60 |
| | THNHA | | 45 °C [120 °F] | | Thermostatic backup heating switch-off temperature | 60 |
| | STH | | 3/5 | | Thermostatic backup heating sensor | 61 |
| | RTH | | | | Thermostatic backup heating relay | |
| | t1O | | 06:00 | | Thermostatic backup heating switch-on time 1 | 60 |
| | t1F | | 22:00 | | Thermostatic backup heating switch-off time 1 | 60 |
| | t2O | | 00:00 | | Thermostatic backup heating switch-on time 2 | 60 |
| | t2F | | 00:00 | | Thermostatic backup heating switch-off time 2 | 60 |
| | t3O | | 00:00 | | Thermostatic backup heating switch-on time 3 | 60 |
| | t3F | | 00:00 | | Thermostatic backup heating switch-off time 3 | 60 |
| PUMP > | | | | | Speed | |
| | PUMP1 | | PSOL | | Speed variant pump 1 | 47 |
| | n1LO | | 20% | | Minimum speed | 47 |
| | n1HI | | 100% | | Maximum speed | 48 |

| Channels | | | | | | |
|----------|---------------|---------------|-----------------|-----------|-------------------------------------|------|
| Channel | Sub channel 1 | Sub channel 2 | Factory setting | Change to | Description | Page |
| | PUMP2 | | PSOL | | Speed variant pump 2 | 47 |
| | n2LO | | 20% | | Minimum speed | 47 |
| | n2HI | | 100% | | Maximum speed | 48 |
| | PUMP3 | | OnOF | | Speed variant pump 3 | 47 |
| | n3LO | | 30% | | Minimum speed | 47 |
| | n3HI | | 100% | | Maximum speed | 48 |
| OTDIS > | | | | | Thermal disinfection option | 62 |
| | PDIS | | 01:00 | | Monitoring period (interval) | 62 |
| | DDIS | | 01:00 | | Disinfection period | 62 |
| | TDIS | | 60 °C [140 °F] | | Disinfection temperature | 62 |
| | SDIS | | 00:00 | | Starting time | 63 |
| | TSDIS | | 3 | | Temperature sensor for disinfection | 63 |
| | OTDIS | | ON | | Deactivation Thermal disinfection | 63 |
| OPARR > | | | | | Parallel relay option | 63 |
| | PARRE | | 2 | | Parallel relay | 63 |
| | INVER | | OFF | | Inversion | 63 |
| OHQM > | | | | | Energy metering option | 64 |
| | FTYPE | | 1 | | Flow rate detection type | 64 |
| | FMAX | | 6 l/min | | Adjustable maximum flow rate | 64 |
| | FIMP | | 1 l/Imp | | Pulse rate | 65 |
| | MEDT | | 1 | | Antifreeze type | 64 |
| | MED% | | 40 | | Antifreeze concentration | 65 |
| | SFHQM | | 1 | | Sensor flow HQM | 65 |
| | SRHQM | | 4 | | Sensor return HQM | 65 |
| DATE> | | | | | Enter date | 66 |
| | TIME | | 12:00 | | Time | 66 |
| | YYYY | | 2010 | | Year | 66 |
| | MM | | 03 | | Month | 66 |
| | DD | | 15 | | Day | 66 |
| LANG > | | | dE | | Language | 67 |
| MAN > | | | Auto | | Manual mode | 61 |
| BLPR > | | | OFF | | Blocking protection | 45 |
| UNIT > | | | °C | | Unit | 67 |
| OSDC > | | | | | SD card option | 67 |
| CODE | | | 0000 | | User code | 71 |
| RESET | | | OFF | | Factory setting | |

* are blocked against each other

7 User code and short menu - Adjustment values

CODE

The access to some adjustment values can be restricted via a user code (customer). For safety reasons, the user code should generally be set to the customer code before the controller is handed to the customer!

1. Installer **0262** (Factory setting)

All menus and adjustment values are shown and all values can be altered.

2. Customer **0000**

The Installer level is not shown, adjustment values can be changed partly (see below)

➔ In order to restrict the access, enter 0000 in the menu item **CODE**.

The display changes to the status level. If the adjustment channel is selected afterwards, the short menu shown below will be available. The short menu suits the selected system.

➔ In order to authorize the access, enter 0262 in the menu item **CODE**.

| Channel | Factory setting | Adjustment range | Designation |
|---------|-----------------|-----------------------------------|--|
| TIME | 12:00 | 00:00... 23:59 | Time |
| DT1O | 6 | 1.0 ... 50.0 K [2.0 ... 90.0 °Ra] | Switch-on temperature difference tank |
| DT1F | 4 | 0.5 ... 49.5 K [1.0 ... 89.0 °Ra] | Switch-off temperature difference tank |
| DT1S | 10 | 1.0 ... 50.0 K [2.0 ... 90.0 °Ra] | Set temperature difference tank |
| S1MAX | 60 | 4 ... 95 °C [40 ... 200 °F] | Tank maximum limitation |
| DT2O | 6 | 1.0 ... 50.0 K [2.0 ... 90.0 °Ra] | Switch-on temperature difference tank 1 |
| DT2F | 4 | 0.5 ... 49.5 K [1.0 ... 89.0 °Ra] | Switch-off temperature difference tank 1 |
| DT2S | 10 | 1.0 ... 50.0 K [2.0 ... 90.0 °Ra] | Set temperature difference tank 1 |
| S2MAX | 60 | 4 ... 95 °C [40 ... 200 °F] | Tank maximum limitation tank 1 |
| LST2 | On | On/OFF | Loading tank 2 on |
| DT3O | 6 | 1.0 ... 50.0 K [2.0 ... 90.0 °Ra] | Switch-on temperature difference tank 2 |
| DT3F | 4 | 0.5 ... 49.5 K [1.0 ... 89.0 °Ra] | Switch-off temperature difference tank 2 |
| DT3S | 10 | 1.5 ... 50.0 K [3.0 ... 90.0 °Ra] | Set temperature difference tank 2 |
| S3MAX | 60 | 4 ... 95 °C [40 ... 200 °F] | Tank maximum limitation tank 2 |
| LST3 | On | On/OFF | Loading tank 3 on |
| MAN1 | Auto | Auto/ON/OFF/n LO/n HI | Manual operation pump 1 |
| MAN2 | Auto | Auto/ON/OFF/n LO/n HI | Manual operation pump 2 |
| MAN3 | Auto | Auto/ON/OFF/n LO/n HI | Manual operation pump 3 |
| MAN4 | Auto | Auto/On/OFF | Manual operation pump 4 |
| CODE | 0000 | 0000/0262 | User code |

8 Messages

In the case of an error, the directional pad flashes red and a message is indicated in the status display. A warning triangle is additionally indicated. If more than one error or fault condition has occurred, only the one with the highest priority will be displayed as a message in the status display.



In the case of a sensor error, the corresponding relay is switched off, and a message appears on the display marked by an E. Additionally, a corresponding value for the error type assumed is indicated.

After the error has been removed, the error message disappears.

| Error message | Value | Description | Solution |
|---------------|-------|---------------------------------|--|
| E51 ... 5 | -88.8 | Short circuit at sensor 1 ... 7 | Check the cable |
| | 888.8 | Broken cable at sensor 1 ... 7 | |
| PARAM | | Remote parameterization | Do not parameterize the controller via the push buttons during remote parameterization |

9 Troubleshooting

If a malfunction occurs, a message will appear on the display of the controller.

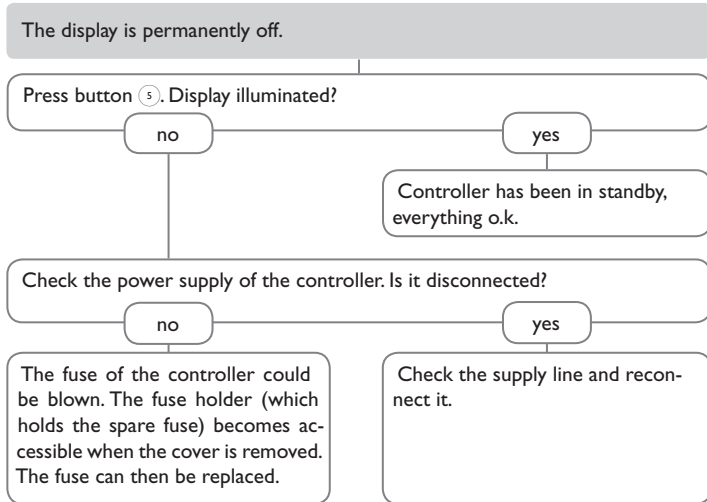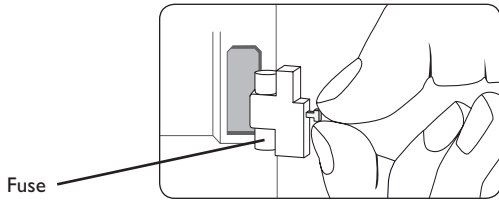

Directional pad flashes red. The symbol is indicated on the display and the symbol flashes.

Sensor fault. An error code instead of a temperature is shown on the corresponding sensor display channel.

888.8

- 88.8

Cable is broken.
Check the cable.

Short circuit.
Check the cable.

Disconnected temperature sensors can be checked with an ohmmeter. Please check if the resistance values correspond with the table.

| °C | °F | Ω | °C | °F | Ω |
|-----|-----|------|-----|-----|------|
| -10 | 14 | 961 | 55 | 131 | 1213 |
| -5 | 23 | 980 | 60 | 140 | 1232 |
| 0 | 32 | 1000 | 65 | 149 | 1252 |
| 5 | 41 | 1019 | 70 | 158 | 1271 |
| 10 | 50 | 1039 | 75 | 167 | 1290 |
| 15 | 59 | 1058 | 80 | 176 | 1309 |
| 20 | 68 | 1078 | 85 | 185 | 1328 |
| 25 | 77 | 1097 | 90 | 194 | 1347 |
| 30 | 86 | 1117 | 95 | 203 | 1366 |
| 35 | 95 | 1136 | 100 | 212 | 1385 |
| 40 | 104 | 1155 | 105 | 221 | 1404 |
| 45 | 113 | 1175 | 110 | 230 | 1423 |
| 50 | 122 | 1194 | 115 | 239 | 1442 |


Resistance values of Pt1000 sensors




Note:

For answers to frequently asked questions (FAQ) see www.resol.com.


Pump is overheated, but no heat transfer from the collector to the tank, flow and return have the same temperature; perhaps also bubbling in the lines.

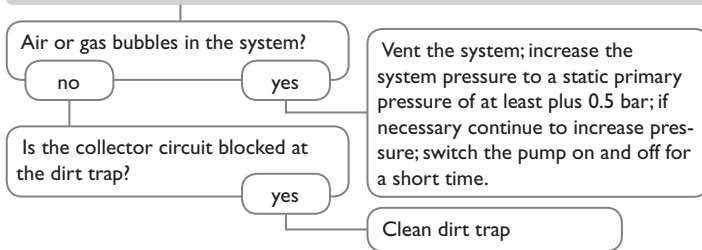


Pump starts up very late.

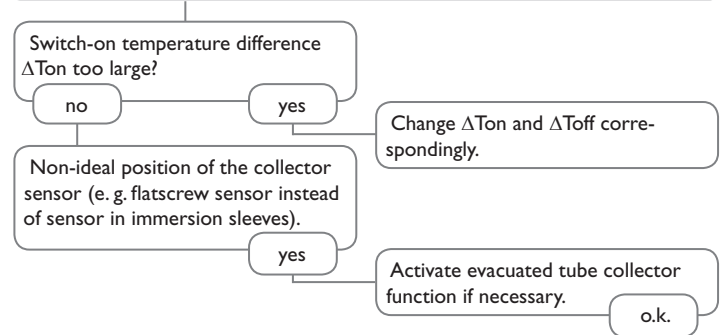

Pump starts for a short moment, switches off, switches on again, etc.

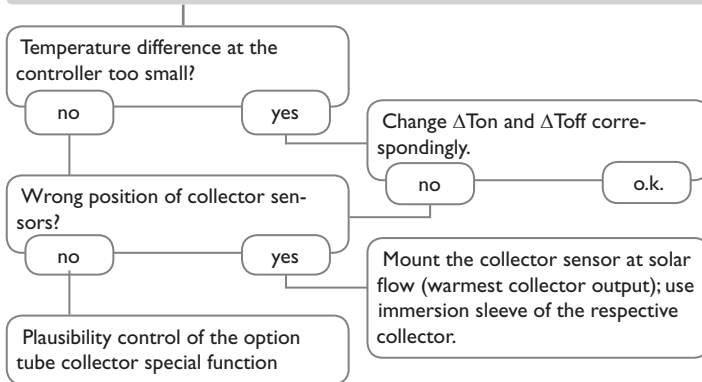

The temperature difference between tank and collector increases enormously during operation; the collector circuit cannot dissipate the heat.

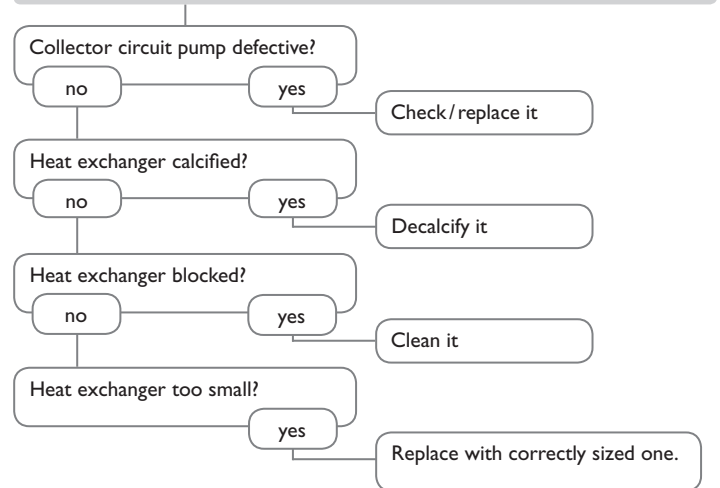

The solar circuit pump does not work, although the collector is considerably warmer than the tank.

Display illuminated?
If not, press button (5).
Display illuminated again?

yes no

There is no current; check fuses / replace them and check power supply.

Does the pump start up in manual operation?

no yes

The adjusted temperature difference for starting the pump is too high; choose a value which makes more sense.

Is the pump current enabled by the controller?

no yes

Controller might be defective - replace it.

Is the pump stuck?

yes

Turn the pump shaft using a screwdriver; now passable?

no

Pump is defective - replace it.

Tanks cool down at night.

Collector circuit pump runs during the night?

no yes

Check controller

Collector temperature at night is higher than the outdoor temperature.

no yes

Check the non-return valves in the flow and the return pipe for functional efficiency.

Sufficient tank insulation?

yes no

Increase insulation.

a
Insulation close enough to the tank?

yes no

Replace insulation or increase it.

Are the tank connections insulated?

yes no

Insulate the connections.

Warm water outflow upwards?

no yes

Change connection and let the water flow sideways or through a siphon (downwards); less tank losses now?

no yes

o.k.

Does the DHW circulation run for a very long time?

no yes

Use the circulation pump with timer and switch-off thermostat (energy-efficient circulation).

Circulation pump and blocking valve should be switched off for 1 night; less tank losses?

yes no

Check whether the pumps of the after-heating circuit run at night; check whether the non-return valve is defective; problem solved?

no

Check the non-return valve in warm water circulation - o.k.

yes no

Further pumps which are connected to the solar tank must also be checked.

Clean or replace it.

The gravitation circulation in the circulation line is too strong; insert a stronger valve in the non-return valve or an electrical 2-port valve behind the circulation pump; the 2-port valve is open when the pump

is activated, otherwise it is closed; connect pump and 2-port valve electrically in parallel; activate the circulation again. Deactivate pump speed control!

10 Accessories

10.1 Sensors and measuring instruments



Temperature sensors

The product range includes high-precision platinum temperature sensors, flatscrew sensors, outdoor temperature sensors, indoor temperature sensors, cylindrical clip-on sensors, also as complete sensors with immersion sleeve.



Overvoltage protection device

In order to avoid overvoltage damage at collector sensors (e.g. caused by local lightning storms), we recommend installing the overvoltage protection RESOL SP10.



V40 flowmeter

The RESOL V40 is a measuring instrument for detecting the flow of water or water/glycol mixtures. After a specific volume has passed, the V40 reed switch sends an impulse to the calorimeter. The heat quantity used is calculated by the calorimeter using these impulses and the measured temperature difference with the help of pre-defined parameters (glycol type, concentration, heat capacity, etc.).

10.2 Interface adapters



Interface adapters VBus®/USB and VBus®/LAN

The new VBus®/USB interface adapter is the interface between the controller and a personal computer. With its standard mini-USB port it enables a fast transmission of system data for processing, visualizing and archiving as well as the parametrization of the controller via the VBus®. A full version of the RESOL ServiceCenter software is included.

The VBus®/LAN interface adapter is designed for the direct connection of the controller to a PC or router. It enables easy access to the controller via the local network of the owner. Thus, controller access, system parametrization and data charting can be effected from every workstation of the network. The VBus®/LAN interface adapter is suitable for all controllers equipped with a RESOL VBus®. A full version of the RESOL ServiceCenter software is included.



Smart Display SD3/Large Display GA3

The RESOL Smart Display is designed for simple connection to RESOL controllers with RESOL VBus®. It is used for visualizing data issued by the controller: collector temperature, tank temperature and energy yield of the solar thermal system. The use of high-efficiency LEDs and filter glass assures a high optical brilliance and good readability even in poor visibility conditions and from a larger distance. An additional power supply is not required. One module is required per controller.

The RESOL GA3 is a completely mounted large display module for visualization of collector- and tank temperatures as well as the heat quantity yield of the solar system via one 6-digit and two 4-digit 7-segment-displays. An easy connection to all controllers with RESOL VBus® is possible. The front plate is made of antireflective filterglass and is printed with a light-resistant UV-lacquering. The universal RESOL VBus® allows the parallel connection of 8 large displays as well as additional VBus® modules.



AM1 Alarm module

The AM1 Alarm module is designed to signal system failures. It is to be connected to the VBus® of the controller and issues an optical signal via the red LED if a failure has occurred. The AM1 also has a potential-free relay output, which can e.g. be connected to a building management system (BMS). Thus, a collective error message can be issued in the case of a system failure. Depending on the controller and the sensors connected, different fault conditions can be signaled, e.g. sensor failures, excess or negative system pressure as well as errors in the flow rate, such as a dry run of the pump.

The AM1 Alarm module ensures that occurring failures can be immediately recognized and repaired, even if the system and the controller are difficult to access or located in a remote place. Thus, the reliability and the stable yield of the system are ensured.

11 Index

| | |
|--|----|
| A | |
| Antifreeze function | 50 |
| B | |
| Blocking protection time, display channel | 45 |
| C | |
| Collector cooling | 48 |
| Collector emergency shutdown | 48 |
| Collector temperatures, display channel | 42 |
| Cooling functions | 54 |
| D | |
| ΔT control | 45 |
| Data communication / Bus | 6 |
| Disinfection period, display channel | 62 |
| E | |
| Electrical connection | 5 |
| Energy metering | 64 |
| Evacuated tube collector function | 49 |
| F | |
| Flow rate, display channel | 43 |
| Further temperatures, display channel | 42 |
| H | |
| Heat dump | 56 |
| Heat exchange function / solid fuel boiler / return preheating | 56 |
| Heat quantity, display channel | 43 |
| HQM sensors | 65 |
| L | |
| Language | 67 |
| Loading tank 2 | 47 |
| M | |
| Manual mode | 61 |
| Maximum speed | 48 |
| Maximum tank temperature | 46 |
| Maximum temperature limitation | 57 |
| Minimum collector limitation | 49 |
| Minimum speed | 47 |
| Minimum temperature limitation | 58 |
| Monitoring period, display channel | 44 |
| Mounting | 5 |
| O | |
| Operating hours counter | 43 |
| P | |
| Parallel relay | 63 |
| Pause control | 54 |
| Priority logic | 51 |
| Pump control | 47 |
| S | |
| SD card | 67 |
| Selecting the system | 45 |
| Sensor maximum tank temperature | 46 |
| Speed | 43 |
| Speed control | 46 |
| Spreaded loading option | 53 |
| Starting time, display channel | 44 |
| System cooling | 55 |
| T | |
| Tank cooling | 55 |
| Tank set option | 53 |
| Tank temperatures, display channel | 42 |
| Temperatures at S3, S4 and S5, display channel | 42 |
| Thermal disinfection (OTDIS) | 62 |
| Thermal disinfection with starting delay | 63 |
| Thermostat function | 59 |
| Time and date | 66 |
| Time, display channel | 44 |
| Troubleshooting | 72 |

Distributed by:

RESOL – Elektronische Regelungen GmbH

Heiskampstraße 10
45527 Hattingen / Germany

Tel.: +49 (0) 23 24 / 96 48 - 0

Fax: +49 (0) 23 24 / 96 48 - 755

www.resol.com

info@resol.com

Important note

The texts and drawings in this manual are correct to the best of our knowledge. As faults can never be excluded, please note:

Your own calculations and plans, under consideration of the current standards and directions should only be basis for your projects. We do not offer a guarantee for the completeness of the drawings and texts of this manual - they only represent some examples. They can only be used at your own risk. No liability is assumed for incorrect, incomplete or false information and / or the resulting damages.

Note

The design and the specifications can be changed without notice.
The illustrations may differ from the original product.

Imprint

This mounting- and operation manual including all parts is copyrighted. Another use outside the copyright requires the approval of RESOL – Elektronische Regelungen GmbH. This especially applies for copies, translations, micro films and the storage into electronic systems.

© **RESOL – Elektronische Regelungen GmbH**